
stomdevice

ProVecta 3D Prime

EN-US

Installation instructions

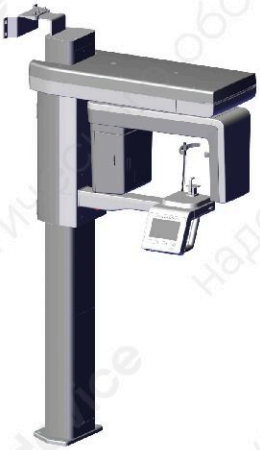

RxOnly

AIR TECHNIQUES equipped for life®

2210200497L41

A7767

1911V004

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

Contents

Important information

1 About this document 2
1.1 Warnings and symbols 2
1.2 Copyright information 3
2 Safety 4
2.1 Intended use and indication . . . 4
2.2 Normal use 4
2.3 Improper use 4
2.4 Contraindication 4
2.5 General safety information 4
2.6 Radiation protection 4
2.7 Specialist personnel 5
2.8 Protection from electric shock . . 5
2.9 Essential performance characteristics 5
2.10 Notification requirement of serious incidents 5
2.11 Only use genuine parts 6
2.12 Transport 6
2.13 Disposal 6
2.14 Protection from cybersecurity threats 6

Product description

3 Overview 7
3.1 Scope of delivery 8
3.2 Optional items 8
3.3 Consumables 8
4 Technical data 9
4.1 X-ray tube performance data . . . 10
4.2 Dimensions 15
4.3 Model identification plate 16
4.4 Conformity assessment 16
5 Function 17
5.1 Functional description 17
5.2 Operating elements 17
5.3 Status LED 18
5.4 Positioning aids 18
5.5 Exposure button 19
5.6 Memory card slot 19
5.7 Sensor window 19

Installation

6 Requirements 20
6.1 Installation/setup room 20
6.2 System requirements for the reconstruction computer 21
7 Installation 22
7.1 Checks before unpacking 22
7.2 Unpacking the unit 22
7.3 Setting up the unit 24
7.4 Preparation of the reconstruction computer 38
7.5 Connecting the unit 39
7.6 Limiting the height adjustment . . 44
8 Commissioning and first start-up . . . 45
8.1 Switch the device on 45
8.2 Electrical safety checks 46
8.3 Checking the installation 46
8.4 Calibrating the unit 46
8.5 Carrying out a functional test . . . 46
8.6 Performing an acceptance test . 47

Appendix

9 Handover record 48

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

Important information

1 About this document

These installation instructions are an integral part of the unit.

Air Techniques shall not be held liable and offers no guarantees of the safe and smooth operation of this unit if you fail to comply with notes and instructions contained in these Instructions.

The German version of the instructions is the original manual. All other languages are translations of the original manual.
These installation instructions are valid for Pro-Vecta 3D Prime, order number: A7761.
For use of the unit, note the separate operating instructions (document no. A7767).

1.1 Warnings and symbols

Warnings

The warning notes in this document highlight possible injury to persons or damage to machinery.
They are marked with the following warning symbols:

General warning symbol

Warning – risk of dangerous electric voltages

Warning – X-rays

The warnings are structured as follows:

SIGNAL WORD
Description of type and source of danger

Here you will find the possible consequences of ignoring the warning

› Follow these measures to avoid the danger.

The signal word differentiates between different levels of danger:

- DANGER
  Direct danger of severe injury or death
- WARNING
  Possible danger of severe injury or death
- CAUTION
  Risk of minor injuries
- NOTICE
  Risk of extensive material/property damage

Miscellaneous symbols

These symbols are used in the document and on or in the unit:

Note, e.g. specific instructions regarding the efficient use of the unit.

REF Part number

SN Serial number

MD Medical device

CE xxxx CE labeling with the number of the notified body

Manufacturer

Rx Only Caution: Federal law restricts this device to sale by or on the order of a Doctor.

Dispose of correctly in accordance with EU Directive 2012/19/EU (WEEE).

Type BF applied part

Do not reuse

Not sterile

134 °C Sterilize with steam at 134 °C

Protective ground connection

Equipotential bonding

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice


Fragile, handle with care


Lower and upper atmospheric pressure limits


Lower and upper temperature limits


Lower and upper humidity limits


Stacking limits


Recycling


Keep dry


This way up / store and transport in an upright position


Keep away from sunlight during storage


Refer to Operating Instructions.


Wear hand protection.


Disconnect all power from the unit.


Notice


Emergency stop switch


Warning – X-rays


Warning – risk of dangerous electric voltages


Warning – X-rays

1.2 Copyright information

All electronic drawings, processes, names, software, and appliances mentioned here are protected under copyright.
Printing or copying these Installation and Operating Instructions, including excerpts thereof, may only be carried out with the written approval of Air Techniques.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

2 Safety

The unit has been developed and designed appropriately such that hazards are largely excluded if the unit is used in accordance with its Normal Use.
Despite this, the following residual risks can remain:

- Personal injury due to incorrect use/misuse
- Personal injury due to mechanical effects
- Personal injury due to electric shock
- Personal injury due to radiation
- Personal injury due to fire
- Personal injury due to thermal effects to skin
- Personal injury due to lack of hygiene, e.g. infection

2.1 Intended use and indication

ProVecta 3D Prime is computed tomography x-ray unit intended to generate 3D and panoramic X-ray images in dental radiography for adult and pediatric patients. It provides diagnostic details of the maxillofacial areas for a dental treatment.
The device is operated and used by physicians, dentists, and x-ray technicians.
Not intended for mammography use.

2.2 Normal use

The unit must only be used by dentists or dental assistants who have been trained in the use of X-ray radiation in accordance with the applicable legal requirements.

2.3 Improper use

Any use of this appliance/these appliances above and beyond that described in the Installation and Operating Instructions is deemed to be incorrect usage. The manufacturer cannot be held liable for any damage resulting from incorrect usage. The operator will be held liable and bears all risks.

2.4 Contraindication

The radiobiological effects of X-ray beams in tissue result in the following contraindications:

- Pregnancy
- Pre-existing illnesses preventing the recording of a CBCT image
- Absence of a justified indication

Exceptions can be formulated at the discretion of the physician.

2.5 General safety information

- Comply with the guidelines, laws, rules and regulations applicable at the site of operation when you use this unit.
- Prior to each use, check the function and proper condition of the device.
- Do not convert or modify the unit.
- Comply with the Installation and Operating Instructions.
- Make the Installation and Operating Instructions always available to the operator in the vicinity of the device.

The sale or prescription of this device by a medical practitioner is subject to the restrictions of the applicable Federal Acts. The device may be used only under permanent supervision by a dentist or licensed medical practitioner.

Rx Only Caution: Federal law restricts this device to sale by or on the order of a Doctor.

2.6 Radiation protection

- Comply with all applicable X-ray protection regulations and X-ray protection measures.
- Use the prescribed X-ray protection equipment.
- In order to reduce the level of X-ray exposure, we recommend the use of bismuth, lead shielding or protective aprons, especially for children and teenagers.
- The persons operating the equipment must keep away from the X-ray unit while the exposure is being taken. The minimum distance required by the law must be maintained.
- Children and pregnant women must consult a doctor before recording an X-ray image.
- No person other than the patient is permitted to be present in the radiation room without X-ray protection measures. In exceptional circumstances another person may be present to provide assistance, but this must not be a member of the surgery staff. When the exposure is being taken, make sure that you maintain visual contact with the patient and the unit and keep talking to the patient.
- The radiation room must be lockable to prevent entry by unauthorized persons.
- If a fault occurs, abort the exposure immediately by releasing the trigger button.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

2.7 Specialist personnel

Operation

Persons operating the unit must ensure safe and correct handling based on their training and knowledge.

› Instruct or have every user instructed in handling the unit.

Installation and repairs

› All installation, resetting, alteration, expansion, and repair work must be carried out either by Air Techniques personnel or by a suitably qualified person approved by Air Techniques.

2.8 Protection from electric shock

› Comply with all relevant electrical safety regulations when you work with this unit.

› Never touch the patient and unshielded plug connections of the device at the same time.

› Replace any damaged cables or plugs immediately.

Comply with the EMC rules concerning medical devices

The unit meets the requirements according to IEC 60601-1-2:2014.

› The unit is intended for use in professional healthcare facilities (in accordance with IEC 60601-1-2). If the unit is operated in any other environment, potential effects on the electromagnetic compatibility must be taken into account.

› Do not use the device near HF surgical devices and MRI equipment.

› Keep a minimum distance of 30 cm between the device and other electronical devices.

› Note that cable lengths and cable extensions have effects on electromagnetic compatibility.

› No maintenance measures are required to maintain the basic EMC safety.

› The emissions characteristics of this device render it suitable for use in industrial environments and hospitals (CISPR 11, Class A). When used in a residential environment (which normally requires Class B in accordance with CISPR 11), this device may not provide adequate protection from radio communication services. The operator may need to take corrective measures such as relocating or reorienting the device.

NOTICE

Negative effects on the EMC due to non-authorized accessories

› Use only Air Techniques accessories or accessories approved by Air Techniques.

› Using any other accessories may result in increased electromagnetic interference emissions or the unit having reduced electromagnetic immunity, leading to an erroneous operation mode.

NOTICE

Erroneous operation mode due to use immediately adjacent to other devices or with other stacked devices

› Do not stack the unit together with other devices.

› If this is unavoidable, the unit and other devices should be monitored in order to ensure that they are working correctly.

NOTICE

Reduced performance features due to insufficient distance between unit and mobile HF communication devices

› Keep at least 30 cm distance between the unit (including parts and cables of the unit) and mobile HF communication devices (wireless units) (including their accessories such as antenna cables and external antennas).

2.9 Essential performance characteristics

The unit does not have any essential performance characteristics as set out in IEC 60601-1 section 4.3.

2.10 Notification requirement of serious incidents

The operator/patient has to report any serious incident related the product to the manufacturer and the competent authority of the Member State, in which the operator and/or patient is established/resident.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

2.11 Only use genuine parts

› Only Air Techniques accessories and special accessories or those approved by Air Techniques may be used.
› Only use original spare and replacement parts.

Air Techniques accepts no liability for damage resulting from the use of non-approved accessories, special accessories or any parts other than original spare and wear parts.

The use of non-approved accessories, special accessories or non-genuine working parts / spare parts (e.g. mains cable) can have a negative effect on the electrical safety and EMC.

The following accessories may affect EMC:
– Mains cable (3.6 m; order no.: A7782)
– Exposure switch (order no.: A7801)

2.12 Transport

Only the original packaging ensures optimum protection for the unit during transport.
If necessary, the original packaging for this unit can be ordered from Air Techniques.

Air Techniques cannot be held responsible for any damage resulting from transport in unsuitable packaging, even during the warranty period.

› Only transport the unit in its original packaging.
› Keep all packaging away from children.
› Reattach the transport locking devices.
› Do not expose the unit to any strong vibrations or shocks.

Do not bump or pull the unit.

2.13 Disposal

Device

The units and electronic circuits may be disposed of only in proper facilities for recycling and recovery. Make sure to dispose of these objects in compliance with the applicable laws and regulations of the federal, national, state and municipal authorities.

X-ray emitter

The X-ray emitter contains a tube that is potentially capable of imploding, lead cladding and mineral oil.

2.14 Protection from cybersecurity threats

The unit is to be connected to a computer that can be connected to the Internet. Therefore, the system needs to be protected from threats from the Internet.


› Use antivirus software and update it regularly. Look for evidence of possible virus infection and, if applicable, check with the antivirus software and remove the virus.
› Perform regular data backups.
› Provide access to units only to trustworthy users, e.g. by means of user name and password.
› Make sure that only trustworthy contents are downloaded. Install manufacturer-authenticated software and firmware updates only.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Product description

3 Overview

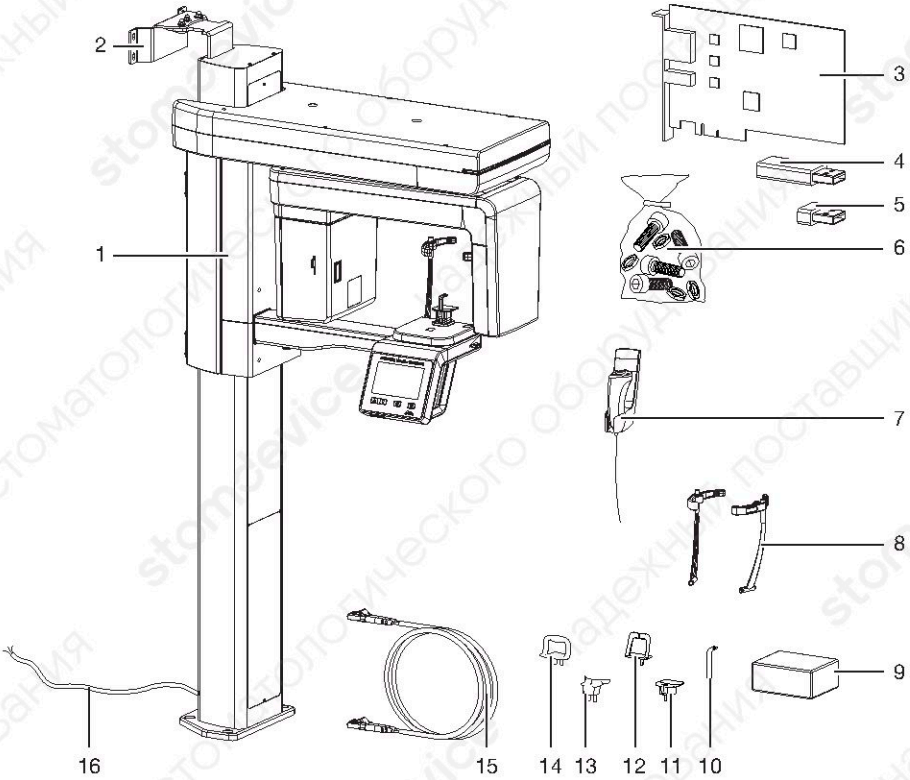

1 3D and panoramic X-ray unit
2 Wall bracket
3 Frame grabber card
4 USB dongle
5 USB stick with device-specific calibration data
6 Small parts set (e. g. screws, nuts)
7 Exposure switch (with holder)
8 Head supports with cushion
9 Hygienic protective covers for bite block
10 Bite block
11 Adapter for bite block
12 Chin holder for maxillary joint image
13 Chin holder for edentulous jaws
14 Chin holder for sinus image
15 Fiber optic cable
16 Mains cable for permanent connection

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

3.1 Scope of delivery

The following items are included in the scope of delivery (possible variations due to country-specific requirements and/or import regulations):

ProVecta 3D Prime A7750

- Fiber optic cable 10 m / 33 ft
- Exposure switch and holder
- Holder for bite block
- Bite blocks (3x)
- Chin support for edentulous jaws
- Chin holder for maxillary joint image
- Chin holder for sinus image
- Head supports with cushion
- Wall bracket top (16 in)
- Hygienic protective covers for bite block (100 pieces)
- Small parts set (e. g. screws, nuts)
- Various housing parts
- Operating instructions
- Installation instructions
- PCI Express frame grabber card
- USB dongle
- USB stick containing device-specific calibration data

If the mains cable of this unit is damaged it must only be replaced by an original mains cable from the manufacturer.

3.2 Optional items

The following optional items can be used with the device:

Bottom wall bracket set, 16 inch, short (wall/wall installation) A7754
Fiber optic cable 5 m A7757
Fiber optic cable 20 m A7758
Silicone pads for head support Plus A7803
Stand A7815

Acceptance and consistency check

2D X-ray Pan phantom set A7556
Consistency check test phantom 3D set . A7759
Acceptance test phantom 3D set A7760
Ball phantom A7330
2D X-ray test phantom holder A7366

3.3 Consumables

The following materials are consumed during operation of the device and must be re-ordered:

Hygienic protective cover bite block (100 pieces) A7395
Silicone pads for head support Plus A7803

Cleaning and disinfection

Monarch surface disinfection wipes (hundred pcs. - 7" x 9") H6171
Monarch enzymatic cleaner (84.5 oz. bottle) H6201

Information on replacement part is available at the portal for authorized specialist dealers:
www.airtechniques.com.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

4 Technical data

Electrical data for the device		
Nominal voltage	V AC	200 - 240
Frequency	Hz	50/60
Protection class		I
Operating mode X-ray tube		S6 = 6.3% 320 s duty cycle 20 s / 5 min (switch-on/switch-off time)
Operating mode height adjustment		S3 = 9% duty cycle 1 min / 9 min (switch-on/switch-off time)
Rated power	W	170
Maximum power	kVA	2.2
Fuses* (2 pcs.)	A	T 10.0 AH / 250 V~ (IEC 60127-2, Sheet 5)

* The fuses may only be replaced by Air Techniques or by a body authorized by Air Techniques.

Classification		
Medical device of class		IIb
FDA classification (CFR Title 21)		II
General technical data		
Dimensions (W x D)	mm in	572.5 x 1181 ± 12 22.54 x 46.50 ± 0.47
Height	mm in	1406 - 2206 55.35 x 86.85
Weight	kg lbs	180 397
Ambient conditions during storage and transport		
Temperature	°C °F	-10 to +60 14 to 140
Relative humidity	%	10 - 75
Air pressure	hPa	860 - 1060
Ambient conditions during operation		
Temperature	°C °F	10 - 35 50 - 95
Relative humidity	%	30 - 75
Air pressure	hPa	860 - 1060
X-ray emitter		
Model		DG-07C11T2
Rated power	kW	1.6 (for 1 s)
Type of high-voltage generator		Inverter

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

X-ray emitter		
Nominal voltage, high-voltage generator	kV	50 - 99 (±10 %)
Nominal current, high voltage generator	mA	4 - 16 (± 10%, max. 75 kV 16 mA, max. 99 kV 10 mA)
Cooling, high-voltage generator		Automatic monitoring Shut-off at ≥ 60°C
Additional filtering at 50 kV	mm Al in Al	2.0 + 3.0 (added automatically for CBCT) 0.08 + 0.12 (added automatically for CBCT)
Integrated filtering at 50 kV	mm Al in Al	0.8 0.03
Total filtering at 50 kV	mm Al in Al	2.8 + 3.0 (added automatically for CBCT) 0.11 + 0.12 (added automatically for CBCT)
X-ray tube model		Toshiba D-052SB
Focal spot size as per IEC 60336 X-ray tube	mm in	0.5 0.02
Anode angle	°	5
Anode heat capacity	kJ	35
Pulse/break ratio		1:60 or more
Duration of radiation exposure	s	0.5 - 20
Maximum current-time product per hour	mAs	960 (at 75 kV/16 mA)

4.1 X-ray tube performance data

- Maximum deviation of the peak voltage from the displayed value ± 10%
- Maximum deviation of the tube current from the displayed value ± 20%
- Maximum deviation of the exposure time from the displayed value ± 10%
- The device complies with the standards IEC 60601-1, IEC 60601-1-3 and IEC 60601-2-63.
- The lowest possible load factor is obtained with a combination of the settings 60 kV and 4 mA.


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Maximum Rating Charts


DC (Center Grounded)

Constant potential high-voltage generator
Nominal Focus Spot Value: 0.5

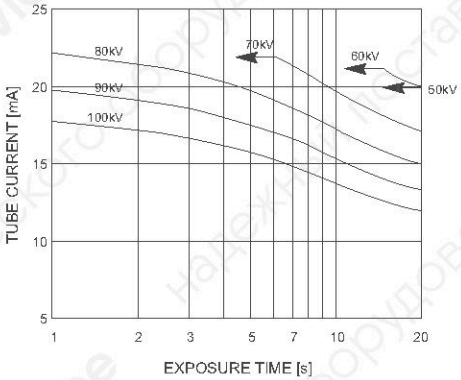


Emission and Filament Characteristics

Constant potential high-voltage generator
Nominal Focus Spot Value: 0.5

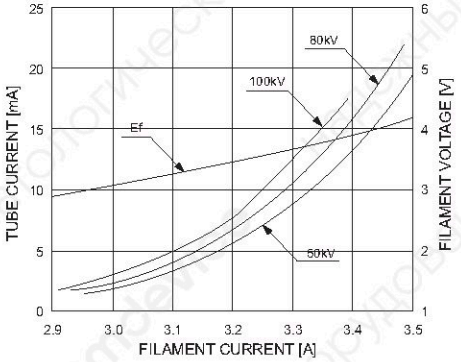

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

Anode Thermal Characteristics

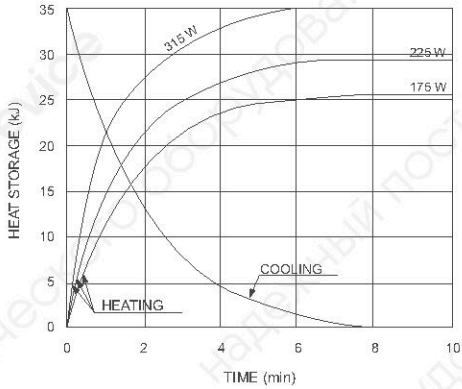

Detector Pano/CBCT		
Brand		Xmaru1404CF
Type		CMOS photodiode array
Pixel size	µm	49.5 99 (2x2 binning) 198 (4x4 binning)
	in	0.001949 0.003898 (2x2 binning) 0.007795 (4x4 binning)
Sensor size	mm in	230 x 160 x 26 9.06 x 6.30 x 1.02
Active surface area	mm in	135.8 x 36.4 5.35 x 1.43
Frame rate	fps	53.5 107 (2x2 binning) 308 (4x4 binning)
Greyscale	bit	14

Acquisition mode	FDD mm in	FOD mm in	ODD mm in	Image capture scale (magnification factor)
Panoramic	600 23.62	477.7 18.81	122.3 4.81	1.26

FDD: distance from focal spot to detector
FOD: distance from focal spot to object
ODD: distance from object to detector (ODD = FDD - FOD)
Image capture scale = FDD/FOD

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Electromagnetic compatibility (EMC) Interference emission measurements	
High-frequency emissions in accordance with CISPR 11	Group 1
Interference voltage at the power supply connection CISPR 11:2009+A1:2010	Class A
Electromagnetic interference radiation CISPR 11:2009+A1:2010	Class A
Emission of harmonics IEC 61000-3-2:2005+A1:2008+A2:2009	Class A
Voltage changes, voltage fluctuations, and emission of flicker IEC 61000-3-3:2013	Conforms

Electromagnetic compatibility (EMC) Interference immunity measurements on cover	
Immunity to interference by discharge of static electricity IEC 61000-4-2:2008 ± 8 kV contact ± 2 kV, ± 4 kV, ± 8 kV, ± 15 kV air	Conforms
Immunity to interference by high-frequency electromagnetic fields IEC 61000-4-3:2006+A1:2007+A2:2010 3 V/m 80 MHz - 2.7 GHz 80 % AM at 1 kHz	Conforms
Immunity to interference by near fields of wireless HF communication devices IEC 61000-4-3:2006+A1:2007+A2:2010 See Table on immunity to interference table by near fields of wireless HF communication devices.	Conforms

Immunity to interference levels by near fields of wireless HF communication devices		
Radio service	**Frequency band MHz**	**Test level V/m**
TETRA 400	380 - 390	27
GMRS 460 FRS 460	430 - 470	28
LTE band 13, 17	704 - 787	9
GSM 800/900 TETRA 800 iDEN 820 CDMA 850 LTE band 5	800 - 960	28

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice


Immunity to interference levels by near fields of wireless HF communication devices		
Radio service	**Frequency band MHz**	**Test level V/m**
GSM 1800 CDMA 1900 GSM 1900 DECT LTE bands 1, 3, 4, 25 UMTS	1700 - 1990	28
Bluetooth WLAN 802.11 b/g/n RFID 2450 LTE band 7	2400 - 2570	28
WLAN 802.11 a/n	5100 - 5800	9


Electromagnetic compatibility (EMC) Interference immunity measurements on supply input	
Immunity to interference by rapid transient bursts – AC voltage grid IEC 61000-4-4:2012 ± 2 kV 100 kHz repetition frequency	Conforms
Immunity to interference, line-line IEC 61000-4-5:2005 ± 0.5 kV, ± 1 kV	Conforms
Immunity to interference by surges, line-earth IEC 61000-4-5:2005 ± 0.5 kV, ± 1 kV ± 2 kV	Conforms
Immunity to interference, line-conducted disturbances induced by high-frequency fields – AC voltage grid IEC 61000-4-6:2013 3 V 0.15 - 80 MHz 6 V ISM frequency bands 0.15 - 80 MHz 80 % AM at 1 kHz	Conforms
Immunity to interference due to voltage dips, short interruptions and voltage fluctuations IEC 61000-4-11:2004 0% U_T for 0.5 cycle 0% U_T for 1 cycle 70% U_T for 25/30 cycles (50/60 Hz) 0% U_T for 250/300 cycles (50/60 Hz)	Conforms

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

4.2 Dimensions

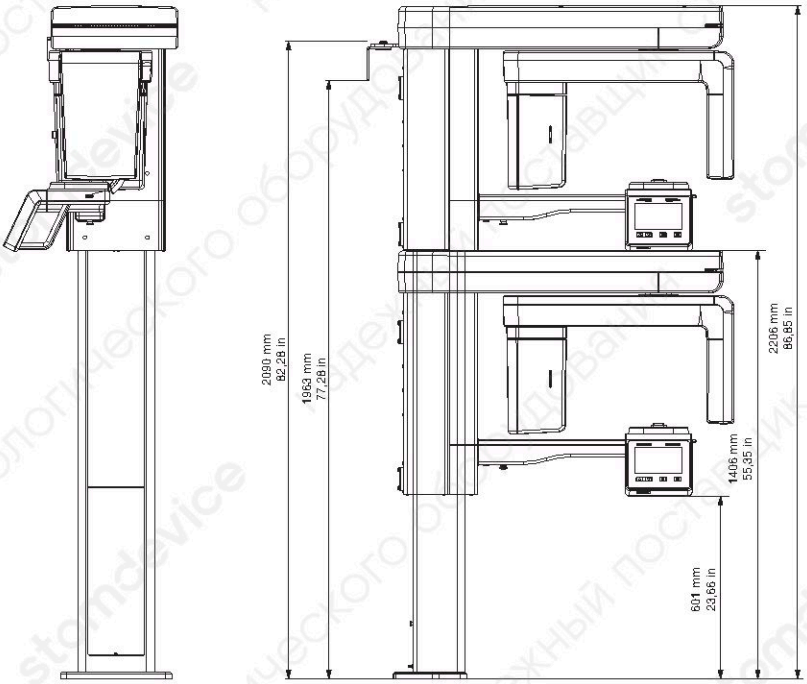


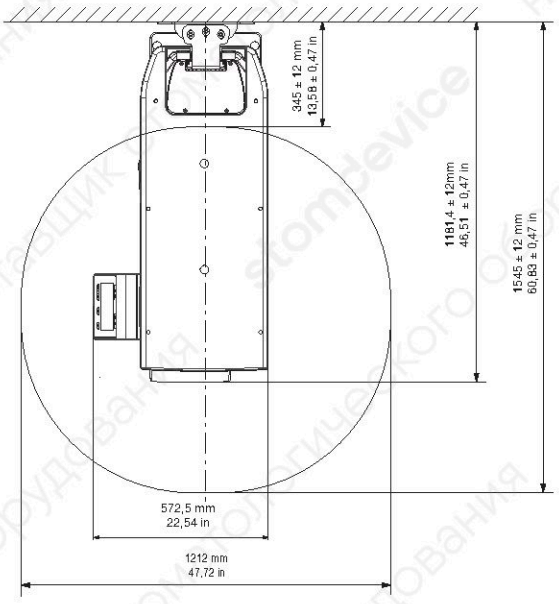

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

4.3 Model identification plate

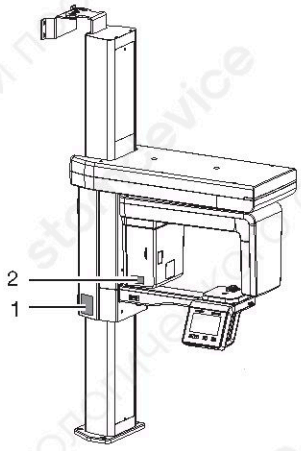

1 Type plate of the unit
2 Type plate of the X-ray tube


4.4 Conformity assessment

This device has been subjected to conformity acceptance testing in accordance with the current relevant guidelines of the European Union. This equipment conforms to all relevant requirements.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

5 Function

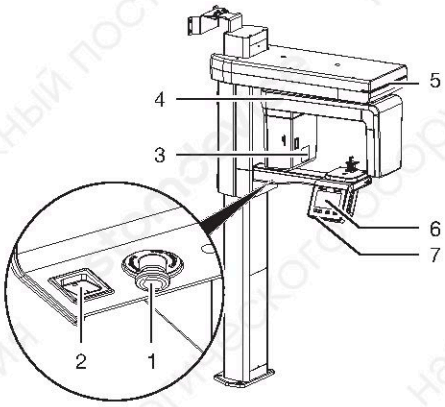


1 Emergency stop switch
2 On/off switch
3 X-ray tube
4 C-shaped elbow
5 Status LED
6 Operating elements
7 Memory card slot

5.1 Functional description

Similar to computer tomography or magnetic resonance tomography, sectional images can be generated with CBCT. With CBCT, an X-ray tube and an imaging sensor opposite it rotate around a seated or standing patient. The X-ray tube rotates through 180°-540° and emits a conical X-ray beam. The X-rays pass through the region under investigation and are measured for image generation by a detector as an attenuated grey scale X-ray image. Here, a large series of two-dimensional individual images is acquired during the revolution of the X-ray tube. Using a mathematical calculation on the rotating image series via a reconstruction computer, a grey value coordinate image is generated in the three spatial dimensions. This three-dimensional coordinate model corresponds to a volume graphic that is made up of individual voxels. This volume can be used to generate sectional images (tomograms) in all spatial dimensions as well as 3D views.

5.2 Operating elements

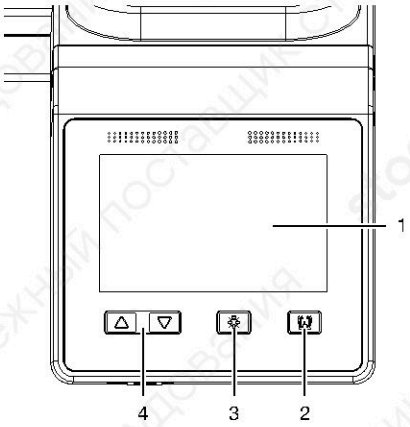

1 Touch screen
2 Button for opening/closing the head supports
3 Button for positioning beams on/off
4 Buttons for height adjustment

The touch screen can be used to operate the unit. Information can be entered on the touch screen with the tip of a finger.

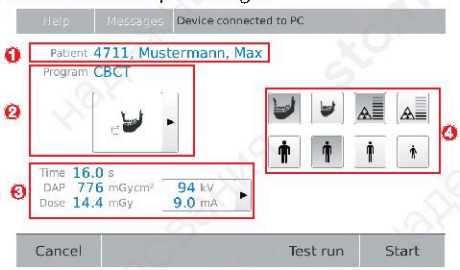


Fig. 1: Monitor, unit ready to acquire image

1 Logged-in patient
2 Selected X-ray image
3 Display of the X-ray parameters (duration, DAP value, voltage and current)
4 Selected parameters


The *Help* button can be used to open a help page for the respective page. The *Messages* button can be used to call up current messages.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice


EN-US

5.3 Status LED

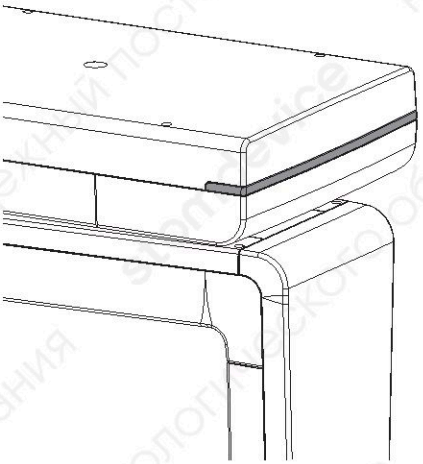

The status LED uses different colors to display the different operating modes:
- Blue: unit ready for operation
- Green: unit ready to acquire image
- Yellow: X-ray beam active

5.4 Positioning aids

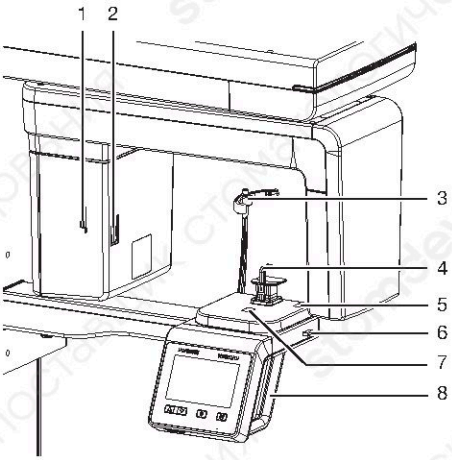

1 Lever for positioning the Frankfurt plane positioning beam
2 Frankfurt plane of the X-ray positioning beam
3 Head supports with cushion
4 Positioning aid, e. g. chin support with bite block
5 Upper canine positioning beam
6 Lever for positioning the upper canine positioning beam
7 Mid-sagittal positioning beam
8 Grips

The applied parts in accordance with IEC 60601-1 are:
- Grips
- Head supports with cushion
- Positioning aids (e.g. bite block and mounting for bite block, chin support for edentulous patients)

Description of the positioning aids

The positioning aids are used to correctly position the patient in the unit. The appropriate positioning aid is selected according to the selected image. The head supports gently keep the head of the patient in place.

Panoramic	
	Bite block and adapter bite block
	Chin holder for edentulous jaws
	Chin holder for maxillary joint image
	Chin holder for sinus image
	Head supports with cushion

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


stomdevice

5.5 Exposure button

Exposure switch

The exposure switch is used to trigger the prepared image acquisition and start the X-ray exposure. The LED indicates the status of the unit, as does the LED on the unit.

- Green: unit ready for recording
- Yellow: X-ray beam active

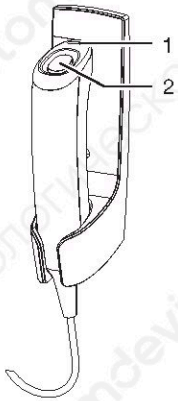


1 Indicator lamp (LED)
2 Exposure button

Alternative exposure button (optional)

This exposure button is usually mounted outside the X-ray room. The exposure button is used to trigger the prepared image acquisition and start the X-ray exposure.


5.6 Memory card slot

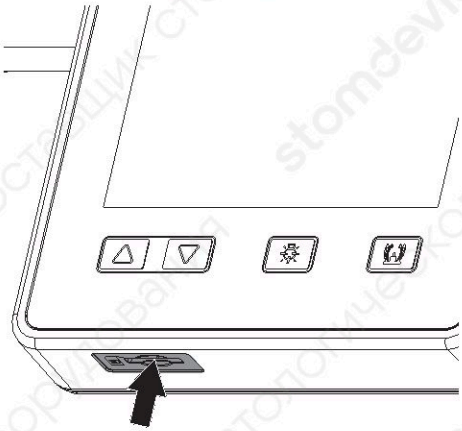

The unit has a slot for a memory card. The slot is needed for service purposes only.

5.7 Sensor window

The active sensor surface is indicated by the markers in the corners of the sensor window. The cross indicates the geometric mid-point of the active sensor surface.

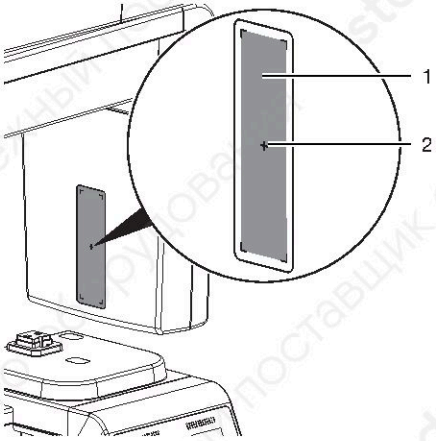

1 Active sensor surface
2 Geometric mid-point of the active sensor surface

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

Installation

Only qualified specialists or persons trained by Air Techniques may install, connect, and commission the unit.

6 Requirements

6.1 Installation/setup room

The room chosen for set up should fulfil the following requirements:

- Closed, dry room.
- It should not be a room made for another purpose (e.g. boiler room or wet cell).
- There should be no major fields of interference (e.g. strong magnetic fields) present that can interfere with the proper operation of the unit.
- The required environmental conditions are met (refer to "Technical Data" in the operating instructions).

Portable and mobile HF communication appliances can interfere with the effectiveness of electrical medical devices.

› Do not stack the unit next to or together with other appliances.

› If, however, this unit is operated next to other units or stacked with other units, monitor the unit carefully in the configuration selected in order to ensure normal operation.

WARNING

Risk of explosion due to inflammation of combustible materials

› Do not use the unit in rooms in which combustible mixtures may be present, e.g. in operating rooms.

Radiation protection

› Comply with all applicable X-ray protection regulations and X-ray protection measures.

› Use the prescribed X-ray protection equipment.

› In order to reduce the level of X-ray exposure, we recommend the use of bismuth, lead shielding or protective aprons, especially for children and teenagers.

› The persons operating the equipment must keep away from the X-ray unit while the exposure is being taken. The minimum distance required by the law must be maintained.

› Children and pregnant women must consult a doctor before recording an X-ray image.

› No person other than the patient is permitted to be present in the radiation room without X-ray protection measures. In exceptional circumstances another person may be present to provide assistance, but this must not be a member of the surgery staff. When the exposure is being taken, make sure that you maintain visual contact with the patient and the unit and keep talking to the patient.

› The radiation room must be lockable to prevent entry by unauthorized persons.

› If a fault occurs, abort the exposure immediately by releasing the trigger button.

Information about electrical connections

DANGER

Electric shock due to incorrectly connected device

› Never install a mains plug instead of the fixed connection.

› Ensure that the electrical connections to the mains power supply are established in accordance with current valid national and local regulations and standards governing the installation of low voltage units in medical facilities.

› Install an all-pole disconnect switch with a contact opening width of at least 3 mm in the electrical connection to the mains power supply. It must be possible to secure the disconnect switch so that it cannot be inadvertently switched back on again.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

6.2 System requirements for the reconstruction computer

A reconstruction PC with increased requirements is required to operate the unit. In addition, a direct connection via fiber optic cable is required between the reconstruction PC and the unit.

The processor and graphics board must meet the specifications and system requirements to ensure a faultless reconstruction. Should these requirements not be met, Air Techniques does not provide any guarantee for faultless reconstruction.

CPU:	≥ Intel Xeon E5-1607 3 GHz 1066
RAM:	≥ 16 GB DDR3-1600
Operating systems:	Microsoft Windows 7 64-bit (Home Premium or higher), SP1 and, in addition, update KB3033929, recommended: KB2921916 Microsoft Windows 10, 64-bit (Pro or higher)
Hard disk:	– For reconstruction: ≥ 1 TB – Additionally for the database (applies to single workstation installation only): the database memory requirements of the database depend on the number of images taken at the practice. (Camera image: c. 1 MB, X-ray image: c. 2 MB - 10 MB, CBCT: 200 - 300 MB)
Drive:	DVD-ROM (optional: software can be installed via download)
Interface:	1 PCI Express slot Gen2 x4 USB socket Gigabit Ethernet (applies to multi-station installation only)
Graphics board:	NVIDIA GeForce GTX970 4 GB NVIDIA GeForce GTX1060 6 GB NVIDIA GeForce GTX1070 8 GB NVIDIA GeForce GTX1080 8 GB
Diagnostic monitor:	In accordance with DIN 6868-157, room category 5 or 6 (depending on the requirements)
Software:	VisionX version 2.3 or higher

- When connecting the unit to other devices, e. g. a PC system, comply with the requirements set out in section 16 of IEC 60601-1 (EN 60601-1).
- When setting up the PC system in the vicinity of the patient:
  Only connect components (e.g. computer, monitor, printer) that comply with the standard IEC 60601-1 (EN 60601-1).
- When setting up the PC system outside of the vicinity of the patient:
  Connect components (e.g. computer, monitor, printer) that comply at least with the IEC 60950-1 (EN 60950-1) standard.

For the system requirements of the computer systems, visit the download area at www.airtechniques.com (document no. E7201).

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

7 Installation

NOTICE

Danger to components due to electrostatic discharge (ESD)

› Establish equipotential bonding between the person carrying out the work and the surroundings, e.g. via a wrist strap that is connected to the basic unit. Here, the basic unit must be earthed via the earth terminal.

NOTICE

Risk of equipment damage


Do not push or pull the unit during installation by holding on to the C-shaped arm or the handle for the patient.

› Move the unit carefully and only grip it by the telescopic column.


7.1 Checks before unpacking

› Visually inspect the packaging for damage.

› Check to see if the Shockwatch display has been activated.

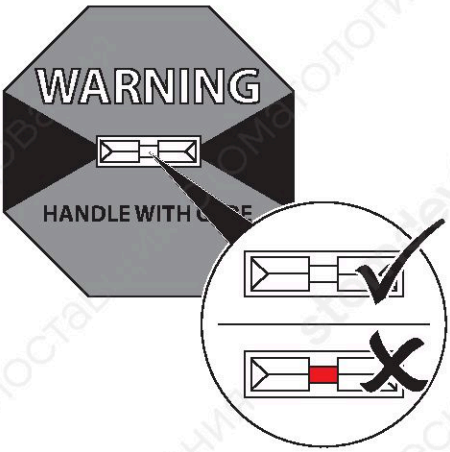

› Check to see if the Tiltwatch display has been activated.

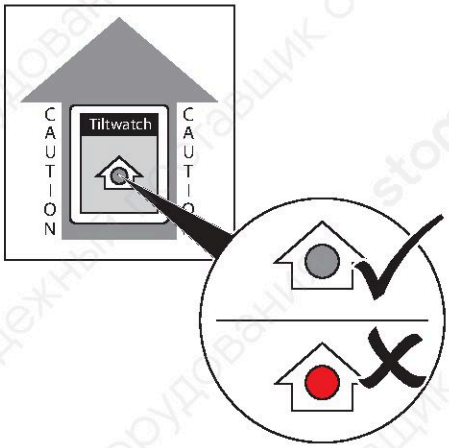

› If the Shockwatch or Tiltwatch display is activated or there is damage to the packaging, do not unpack the unit; contact the shipping company.

7.2 Unpacking the unit

The unit is supplied on a special pallet and is split into several parts on delivery. We recommend using two persons to transport each part individually from the delivery location to the installation site. To ensure that the parts are still protected during transport, do not remove the foam packaging, protective films etc.


› Remove the lid from the outer carton.

› Remove the outer carton.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice


› Take out the accessories carton and the carton with cross-member and C-shaped arm and place to one side.

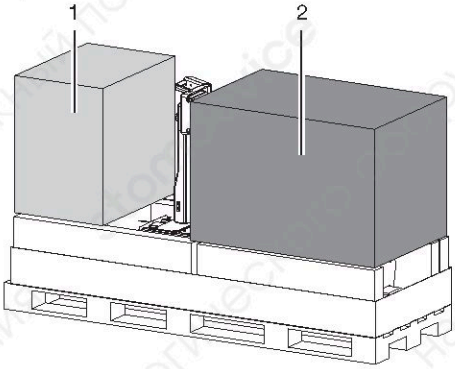

1 Accessories carton
2 Carton with cross-member and C-shaped arm

› Remove the foam packaging from the patient arm.


› Take out the cartons with the trim parts and covers and place to one side.
The cartons marked *Components inside* contain parts or accessories.
Cartons that are unmarked are empty and are provided only for protection and to stop other items moving around during transport.

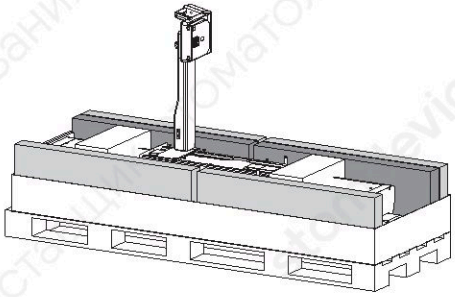

› Remove the foam parts from the ends of the column.

The column can be lifted more easily off the pallet if the lowest outer carton is folded to the outside.

› Take out the column with column slide and transport it to the installation site.

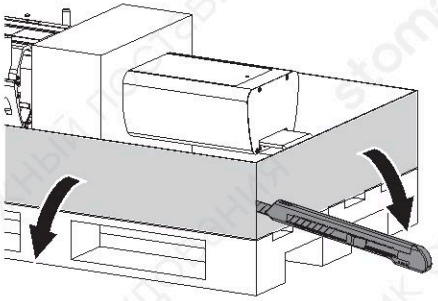

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

7.3 Setting up the unit

Installation variants

	Default Without underfloor heating	Default With underfloor heating	Walls not able to take the load	Standard with additional wall bracket at the bottom
Weight in kg (lbs)	180 (397)	180 (397)	240 (529) (with stand)	180 (397)
Top wall bracket	x	x	x	x
Absorption of tensile forces by the wall at the top wall bracket in N	1400	1400	100	1400
Absorption of tensile forces by each screw and anchor at the top wall bracket in N	350	350	25	350
Bottom wall bracket		x		x
Absorption of tensile forces by the wall at the bottom wall bracket in N		200		200
Absorption of tensile forces by each screw and anchor at the bottom wall bracket in N		50		50
Screwed to the floor with a **bottom plate**	x			x
Absorption of tensile forces by the bottom plate in N	200			200
Absorption of tensile forces by each screw and anchor at the bottom plate in N	50			50
Stand (order no. A7815) with integrated bottom plate, without fastening in the floor			x	

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Requirements

- Easily accessible electrical connections
- The electrical connections comply with the requirements (see "4 Technical data")

Tools required:

- Hexagon key SW13
- Torx key T20
- Torx key T45
- Allen key size SW 3
- Allen key size SW 4
- Allen key size SW 5
- Allen key size SW 6
- Spirit level (max. length 26–30 cm)

Installing the column with column slide


› Keep the column in the foam parts and lay it down in front of the wall to position it.

CAUTION

The unit could tip over and cause injuries.


› Position the unit or secure it appropriately such that it cannot tip over.

› Place some foam from the packaging under the upper part of the column. This will make it easier to install the wall mounting bracket. Alternatively, the wall mounting bracket can be attached to the standing column.

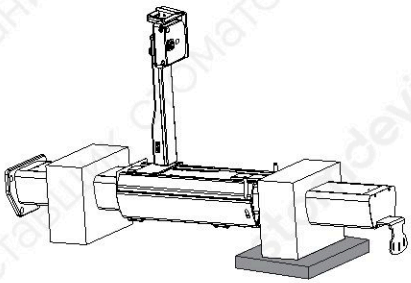


As an alternative to the supplied wall mounting bracket, it is also possible to use a short wall mounting bracket (see "3.2 Optional items"). This will move the unit closer to the wall. Take note of any existing cable ducts etc. when doing this. If the lower wall mounting bracket is to be used as well, make sure this is in fact the short wall mounting bracket.

› Attach the upper wall mounting bracket (refer to the accessories carton) to the column.

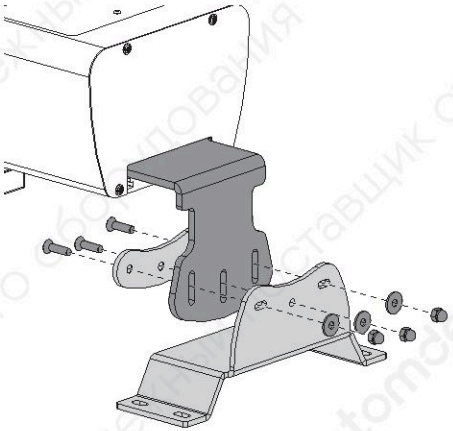


› Make sure that the adjustable feet protrude slightly from the floor plate. This allows the unit to be adjusted in all directions later on.
If the adjustable feet do not protrude, then the lower housing cover will need to be removed (see "Removing the housing cover") so that the adjustable feet can be screwed out slightly.

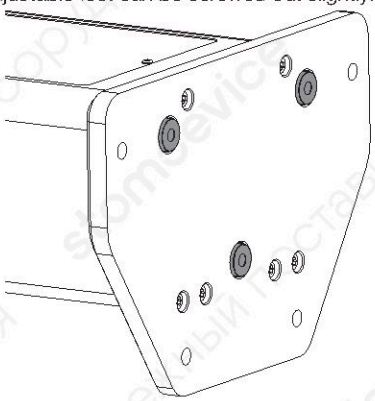

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

› Set up the column with the aid of the transport grips.
› Remove the foam parts.
› Remove the lower transport grip.
› If the column with the column slide cannot be screwed to the floor (e.g. in the case of underfloor heating) or of the wall lacks the appropriate strength, then the lower wall mounting bracket also needs to be installed.
› Attach the retaining plate to the column.

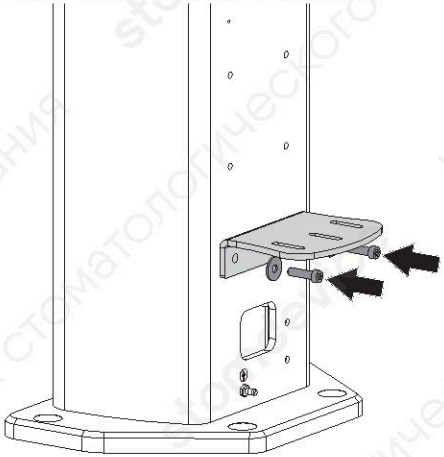

› Secure the wall mounting bracket to the retaining plate.
Here, the wall mounting bracket can be attached in several different mounting positions.


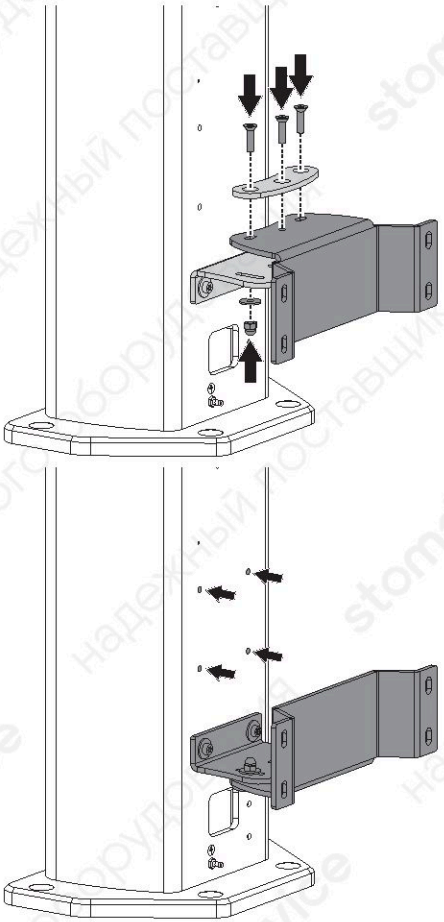


Fig. 2: Possible mounting position for the lower wall mounting bracket


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

› Roughly align the column.
Fine adjustment is performed later on once the cross-member has been installed.

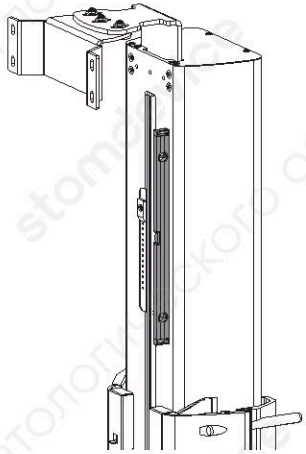


› Mark the anchor holes centrally on the wall mounting bracket(s).
The anchor holes in the floor plate do not need to be marked.
› Take the column with wall mounting bracket away off the wall.
› Drill holes for the anchors and insert the anchors.
› Attach the column with the wall mounting bracket to the wall.
For attachment, use screws with washers (max. ∅ of the washer: 20 mm).
› Roughly align the column again.

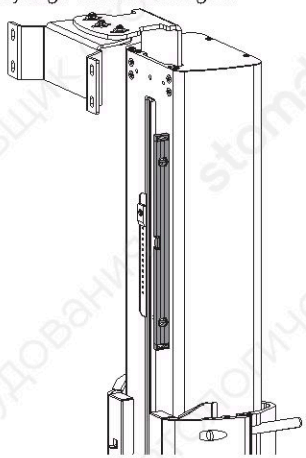


› Drill the anchor holes for the floor plate.
It is possible to drill through the holes in the floor plate (max. drill bit diameter 10 mm).
This step is omitted if the column cannot be screwed to the floor.
› Secure the base plate with four screws.
› Remove the upper transport grip from the column.

Installing the stand (optional)

Requirements:
✓ The top wall bracket is mounted on the column
✓ The column is upright
✓ The bottom transport handles have been removed
› Set the column on the stand.
› Attach the column with four screws and washers to the stand.

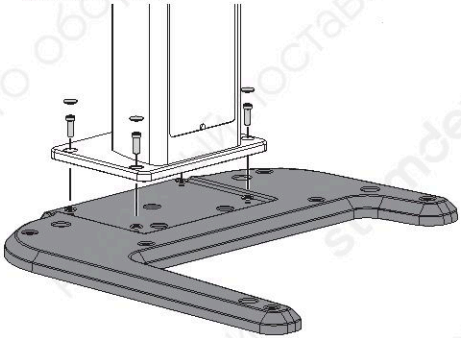

› Roughly align the device via the floor stand.

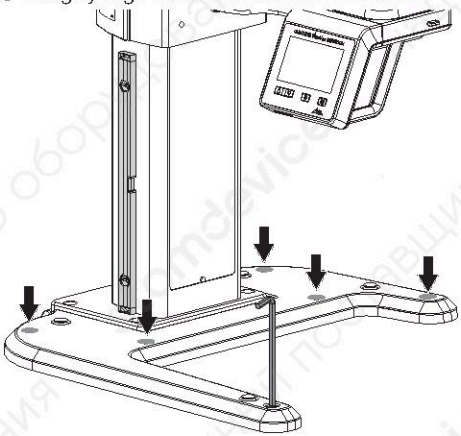

› Place the stand cover on the stand.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice


EN-US

Installing the cross-member with rotating unit

› Place the carton with cross-member and C-shaped arm in front of the column.


› Remove the carton.
Remove enough of the foam parts such that the cross-member with C-shaped arm can be taken out.
Do not remove the protective film from the column. The protective film protects the column against damage during installation of the cross-member with C-shaped arm.


› Mount the transport grips on the cross-member.

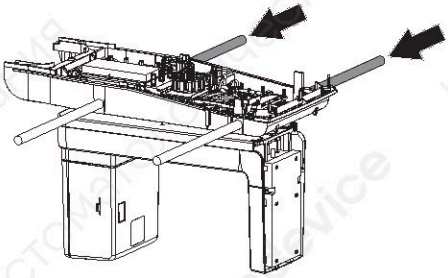

› Detach the cable from the column slide in front of the mounting face and reroute it to the rear.

› Check to make sure that the mounting faces on the cross-member and on the column slide are clean and free of damage.

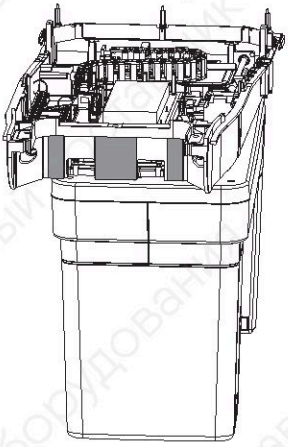

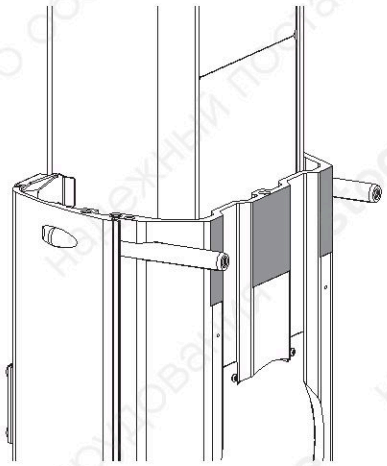


› Check all required threads for ease of movement (refer to the next steps below).


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

During the following steps, maintain the correct sequence when tightening the screws.


› Use the transport grips to lift the cross-member with C-shaped arm out the foam parts and place the cross-member on the column slide. Here, the pins serve as centering aids/guides.

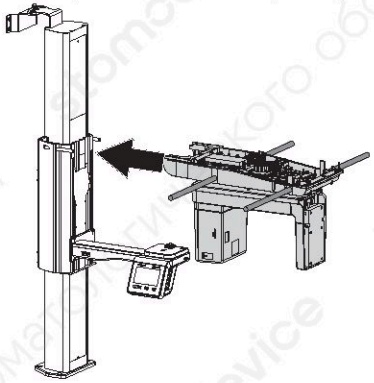

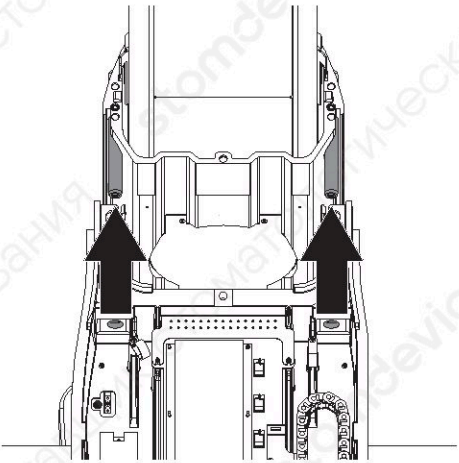


› Position the cross-member with C-shaped arm such that it makes full contact with the column slide.

› One or two persons secure the cross-member with C-shaped arm, while another person attaches the cross-member to the column slide with the two bushings and screws.
Tighten the screws on the locating pins by hand.

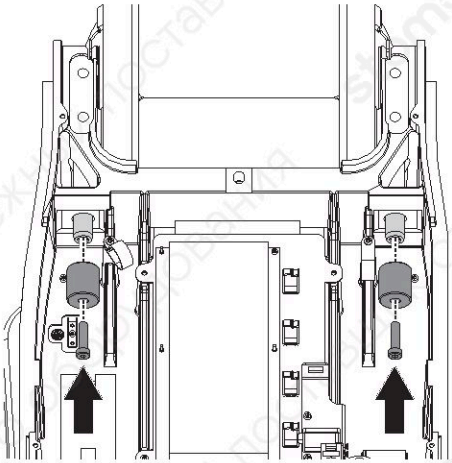


› Tighten the rear four screws by hand.

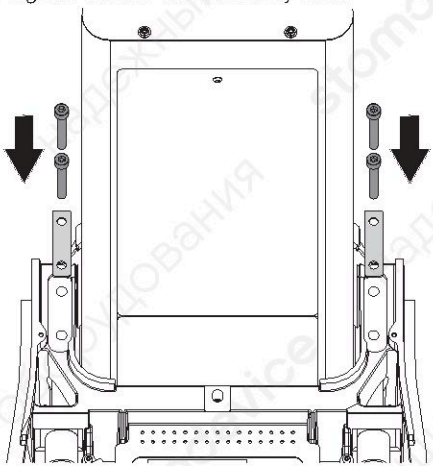


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


› Position the assembly aid for the locating screw and carefully tap in the locating screw with a hammer until it reaches the stop. Failure to use the assembly aid may lead to damage to the screw thread.

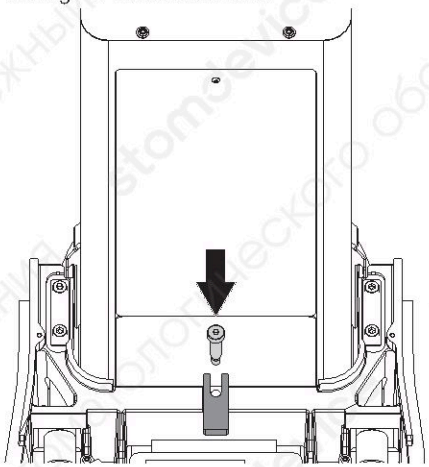


› Remove the assembly aid.

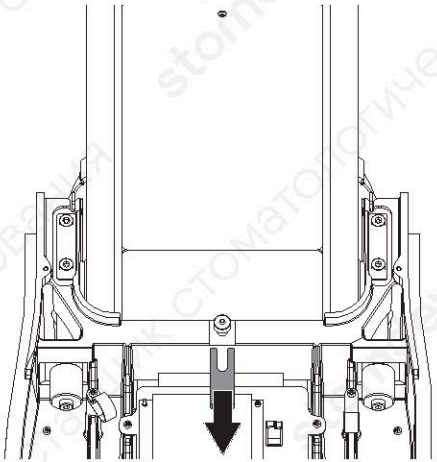

› Tighten the locating screw by hand. To do this, it may be necessary to exert some pressure on the screw.

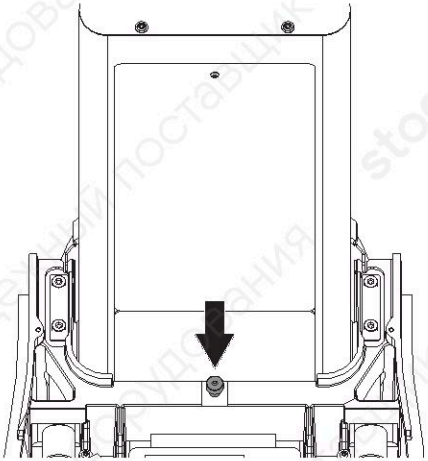

› Check to make sure that the cross-member makes even contact on the column slide. If the cross-member does not make even contact, check all screws and correct them as required.

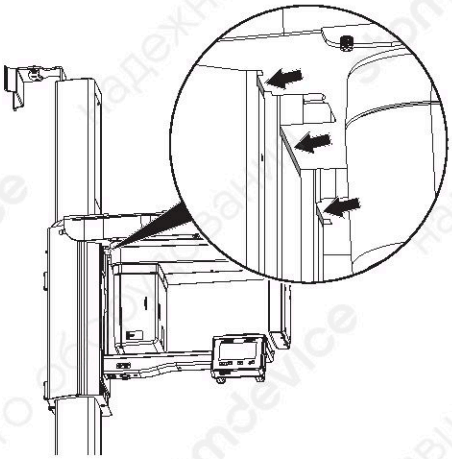



› Once the cross-member is making even contact, start by tightening the two screws on the locating pins, then tighten the four screws on the column slide, and finally tighten the locating screw.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


stomdevice

› Check the alignment of the cross-member with a spirit level.
Correct its position with the adjustable feet on the floor plate. To do this, it may be necessary to loosen the screws on the floor plate and on the wall mounting brackets.

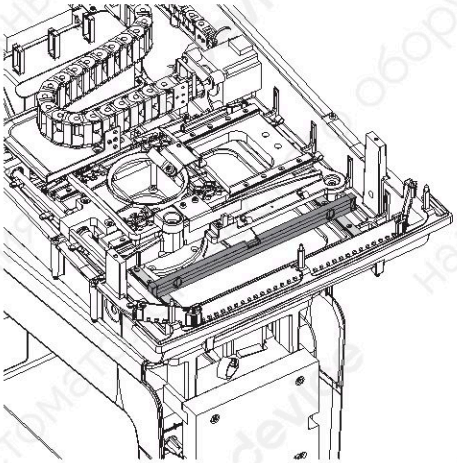


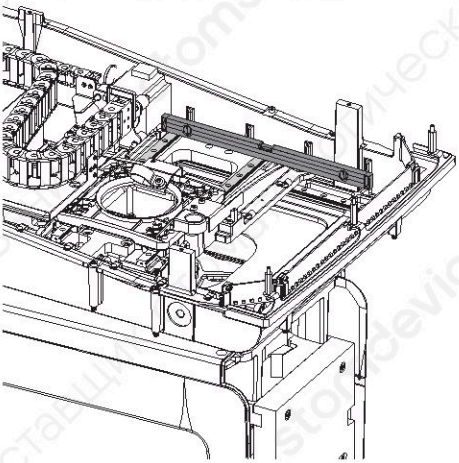

› Fit the cover plate.

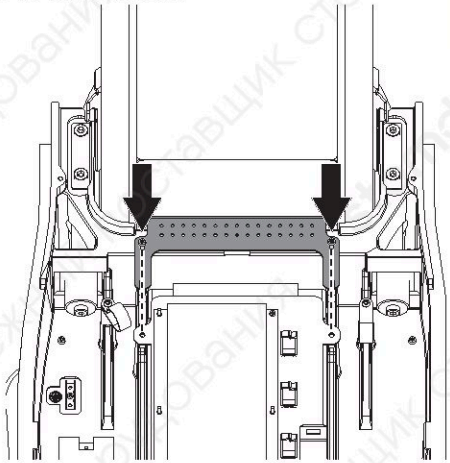

› Remove the transport grips.
› Pull off the protective film from the column.
› Mount the lever for positioning of the Frankfurt plane positioning beam (in the accessories) to the C-shaped arm.

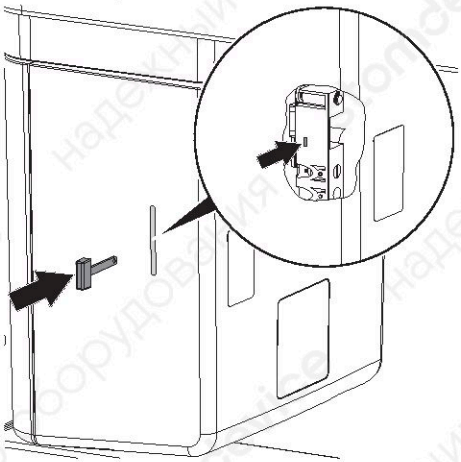



https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

EN-US


Connecting the cross-member

› Route the cables from the column slide through the cable attachments.

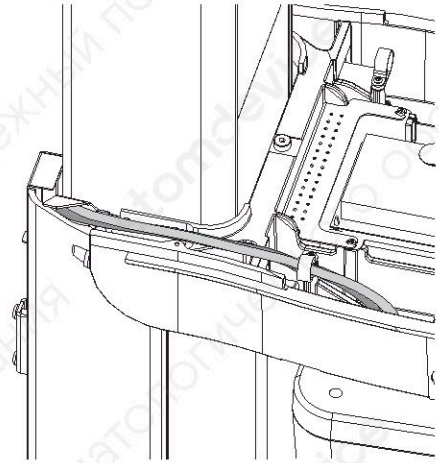


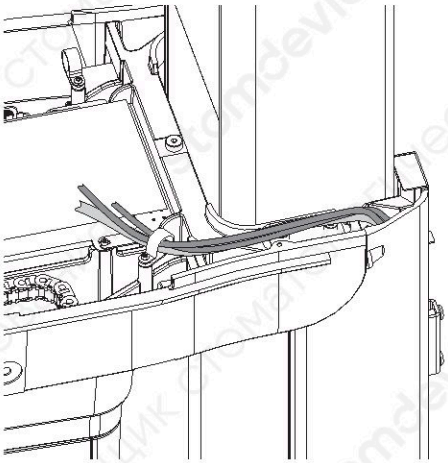

› Connect the wiring connections from the column slide to the cables and sockets on the cross-member.

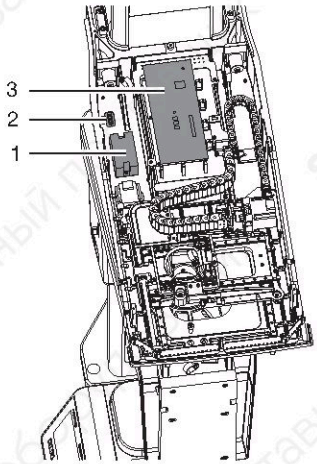

1 Connection T01
2 Protective ground connection
3 PCB A01

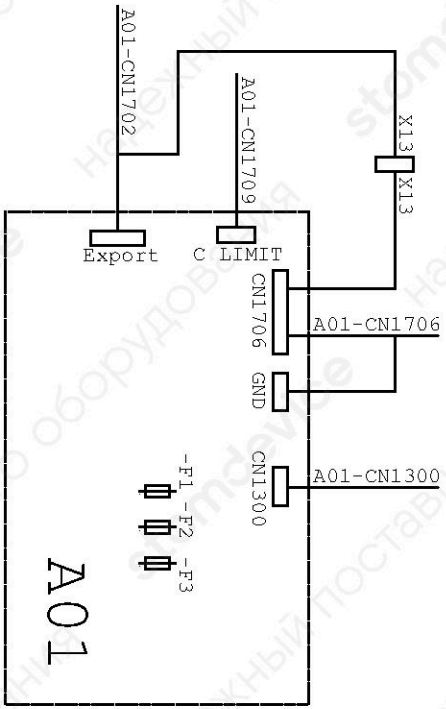


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

› Attach the ferrite core of cable *A01-CN1706* close to PCB*A01*.

› Using cable ties, tie together all cables that run from the cross-member to the column slide and secure them.
This will prevent any cables from being crushed during installation of the covers.

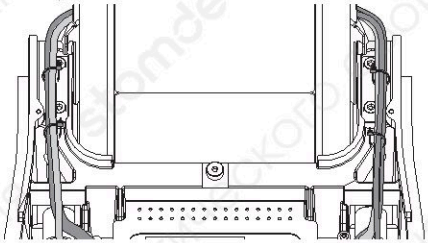


Removing the transport locks


The screws may be difficult to remove as they are fitted with screw locks.

Do not dispose of the screws from the transport locks.

› Remove the screws from the X-slide and Y-slide.

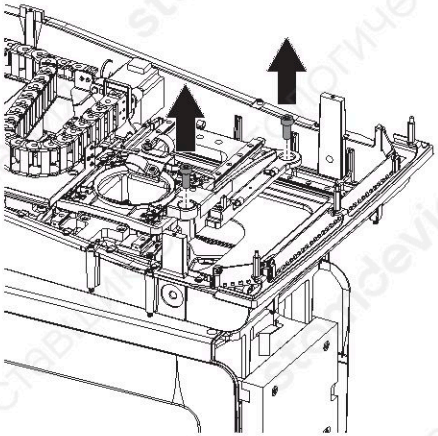


› Remove the screw and threaded pin from the cross-member securing the C-shaped arm.

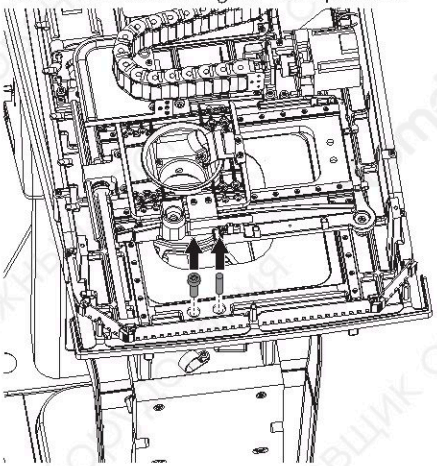

› Remove the red adhesive tape.

› Place the screws for the transport locks in the designated positions in the cross-member and secure them with adhesive tape if required.

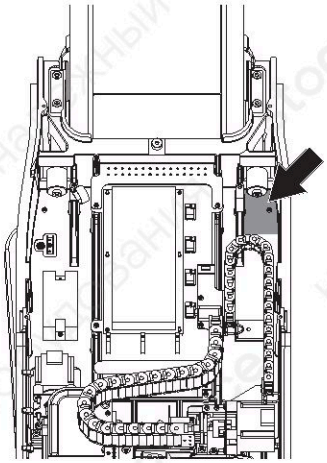


Installing the housing parts

Throughout the entire installation process, the rotating unit can be SLOWLY rotated to make the screws for attaching the covers easily accessible.


Tighten all the screws on the covers to 1 Nm (0.74 ft*lb).

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


› Loosen the four screws of the mounted covers, but do not remove them completely.

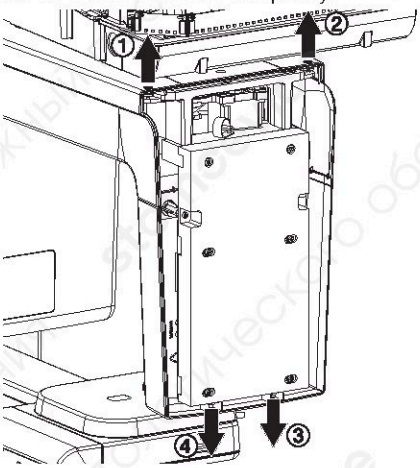

› Secure the cover with a screw and washer.

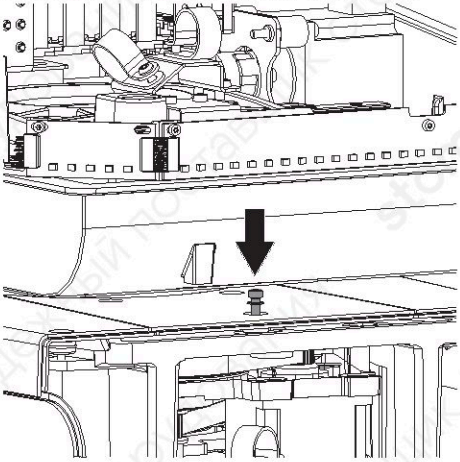


› Position the cover on the rotating unit and slide it to the rear.

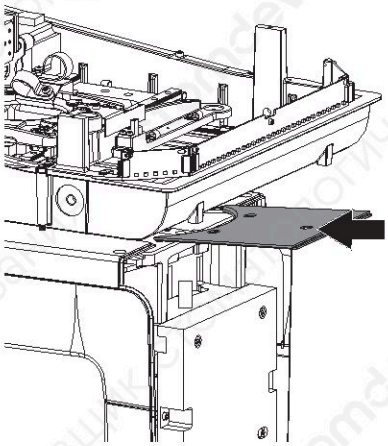


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


stomdevice


› Attach the sensor cover and retightened the loosened screws.
In the process, make sure that the four mountings on the sensor cover are plugged in between the cast bracket and cover.

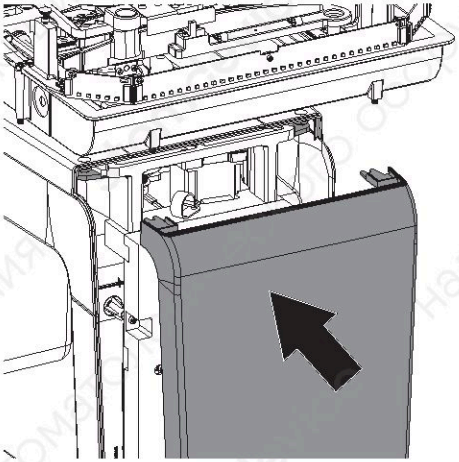

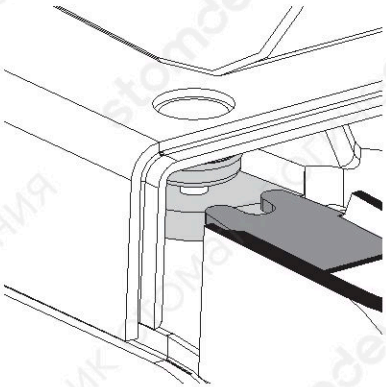

› Mount the lower covers on the left and right of the cross-member.

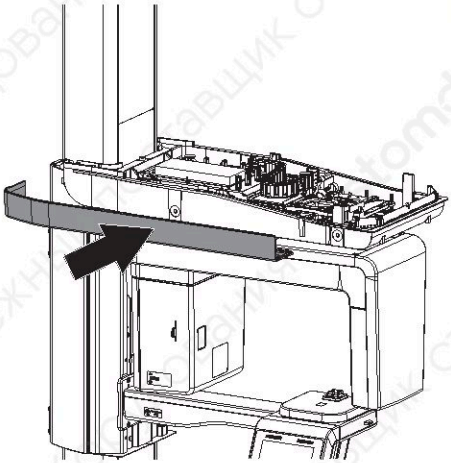

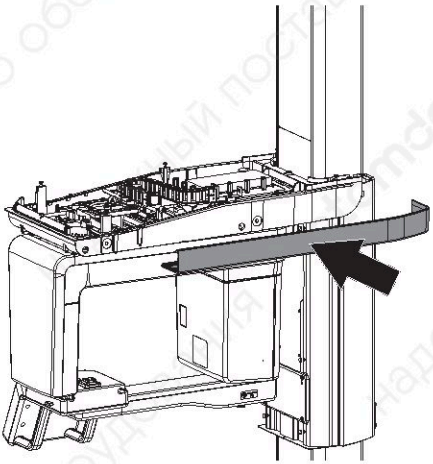

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

› Check to make sure that the covers are seated correctly.
The Y-cover (white plastic panel) must lie between the housing and the cast part of the cross-member. The notch in the Y-cover must face forwards and be located in the designated mounting of the housing.


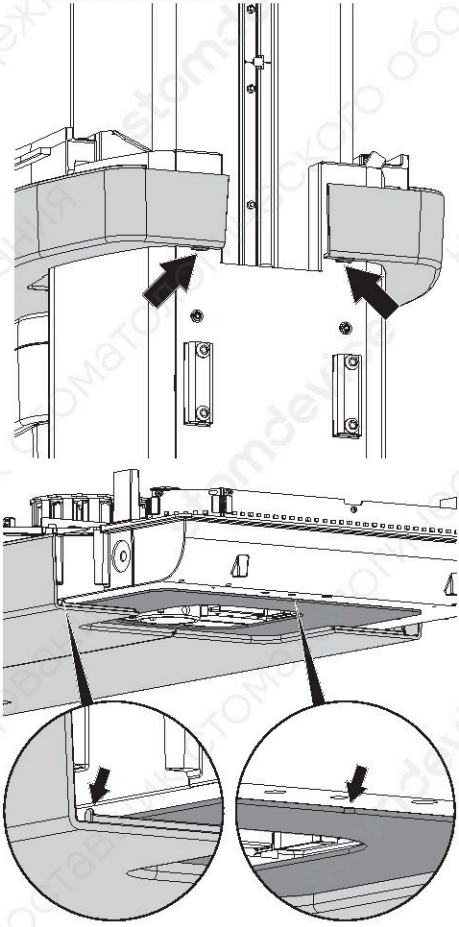


Fig. 3: Illustration with the rotating unit not shown.

› Tighten the lower covers on the left and right.

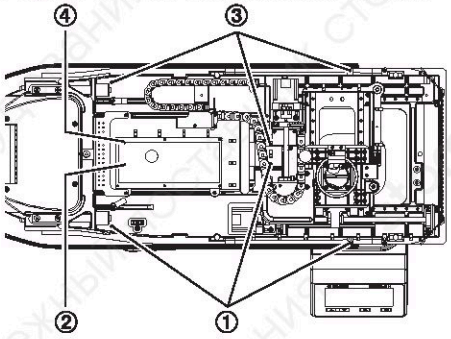



1 Left-hand cover: three screws with washers screwed in from above
2 Left-hand cover: one screw with washer screwed in from below
3 Right-hand cover: three screws with washers screwed in from above
4 Right-hand cover: one screw with washer screwed in from below

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


stomdevice

› Mount the lower cover to the front of the cross-member.

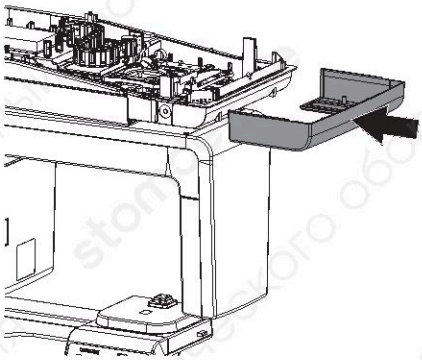

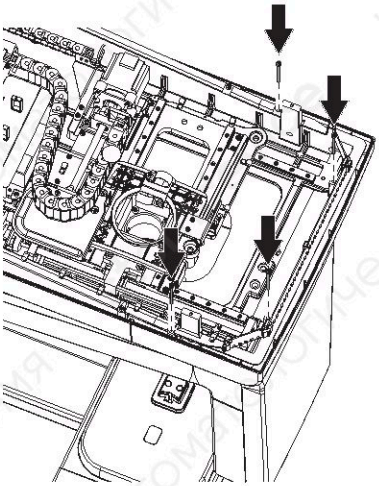


› Mount the upper cover of the cross-member. For the installation use screws with washers (max. ∅ of the washer: 20 mm).

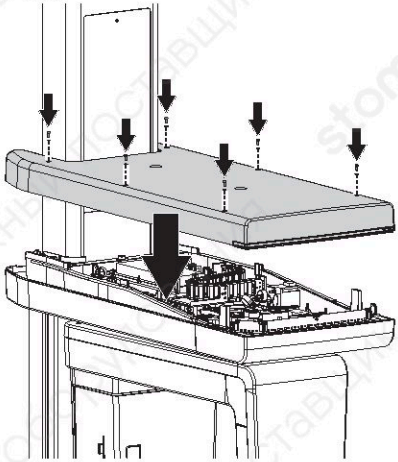


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

› Mount the upper column cover.
For the installation use screws with washers (max. Ø of the washer: 20 mm).

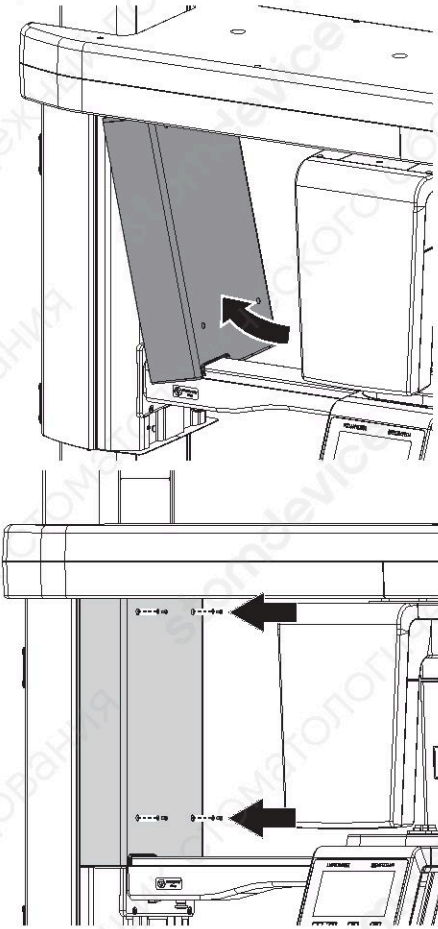

› Mount the lower column cover.
For the installation use screws with washers (max. Ø of the washer: 20 mm).

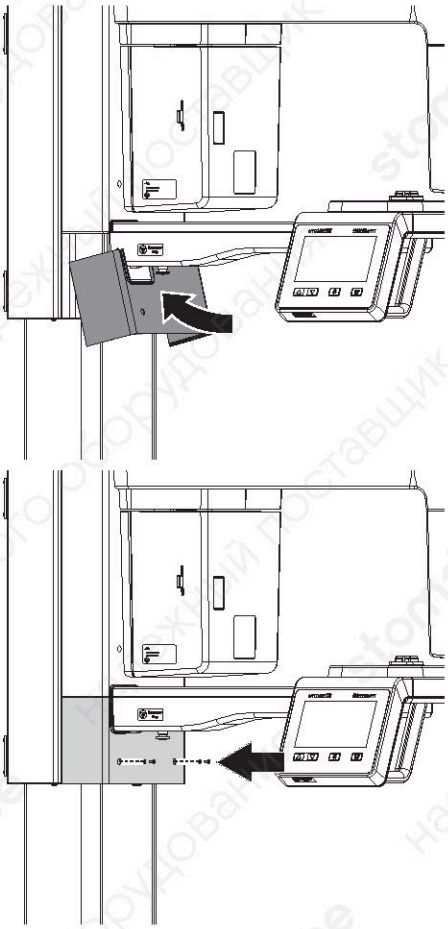

› Do not yet fit the silicone covers for the screw holes in case any parts of the housing need to be taken off again.

7.4 Preparation of the reconstruction computer

The unit supports the following imaging programs:

– VisionX made by Air Techniques

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Installing the driver(s)

If the additional component of the unit was not installed along with the installation of the imaging software, it can be installed later on.

› Place the installation DVD in the drive or run the installation file.
The Start menu opens.
› If the Start menu does not open automatically, run the file *Start.exe*.
› Select the installation language you require.
› Accept the Licence Agreement.
› Select the required components.
› Select the *ProVecta 3D Prime* unit.
› Follow the further instructions given by the installation wizard.

Installing the frame grabber card and USB dongle

› The enclosed frame grabber card is installed in the reconstruction computer (PCI Express slot Gen2 x4).
› Plug the USB dongle into a free USB port.

Computer settings

Windows configuration:


› Set all power saving functions in the energy options or the Power Plan to *Maximum Performance*.
› Add the folder *VistaVoxPlugin* under *C:\ProgramData\Duerr\VistaSoft\WorkstationService* (default directory, the actual folder may differ from this in some cases) as an exemption in the antivirus program (e. g. Windows Defender).
› Under *HKEY_LOCAL-MACHINE\SOFTWARE\Microsoft\Windows\currentVersion\Policies\System* set the registry entry *EnableLUA = 0*.
› *Adjust the settings for User Account Control* to *Never notify*.
To do this, pull the slider all the way to the bottom.

BIOS configuration:

› Launch the reconstruction computer in BIOS.
› Make the following setting: *Runtime Power Management: Disable*.
› Make the following setting: *Idle Power Saving: Normal*.
› Make the following setting: *C1E (BIOS Update): Disable*.
› Disable all energy saving settings of the PCIe slots.


7.5 Connecting the unit

Overview of connection

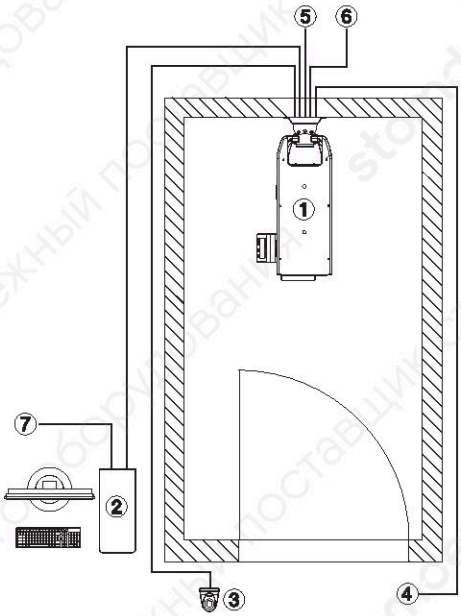


1 ProVecta 3D Prime
2 Reconstruction computer with frame grabber card
3 Exposure switch
4 Door contact (optional)
5 Mains AC power connection
6 Equipotential bonding (optional)
7 Network connection to the practice network

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

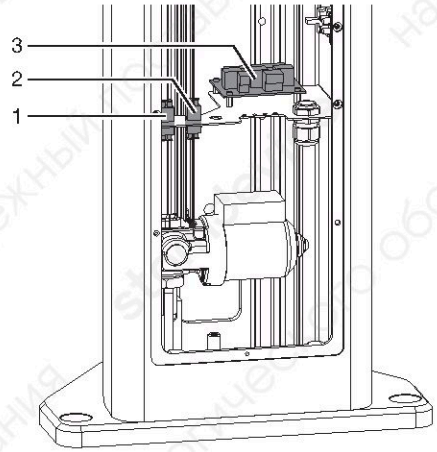

1 X01 Optic Pano: Connection to the reconstruction computer
2 X02 Optic Ceph: Connection to the Ceph unit (no function)
3 PCB A07: Connection to the exposure switch, door contact switch, manual switch for height adjustment


All connected cables should be routed through the cable bushing at the foot of the column.

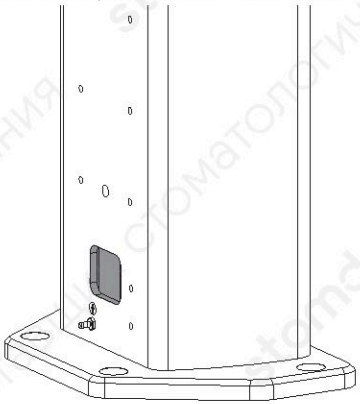


Removing the housing cover

In order to be able to connect the unit, the front cover on the column needs to be removed.

› Remove the screw.

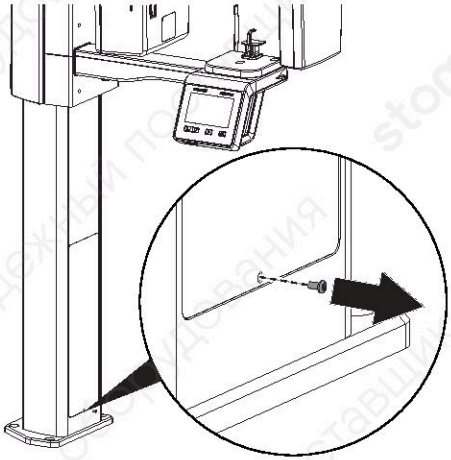

› Remove the cover.

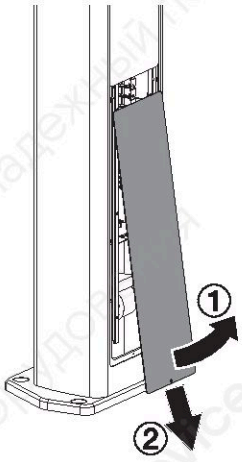


Installing the exposure switch

› Route the cable of the exposure switch though the cable bushing to the front into the column.


https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

› Connect the cable to the PCB *A07*.
Slot X2: *EXP SW*

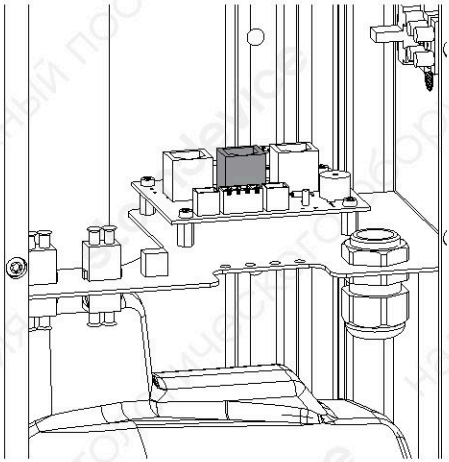


› Remove the cable bridge from slot X6 *DOOR SW*.

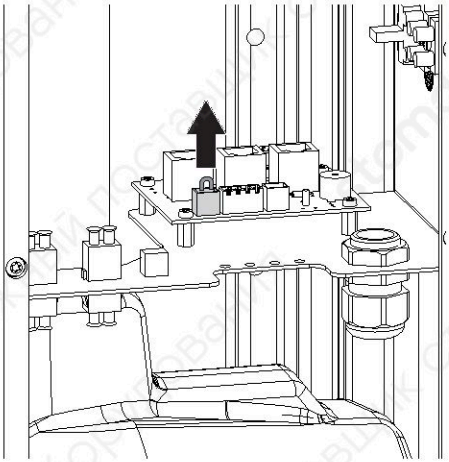

Installing the door contact switch (optional)

A door contact switch can be connected to the unit via an RJ45 connection or via a 2-pole terminal connection.

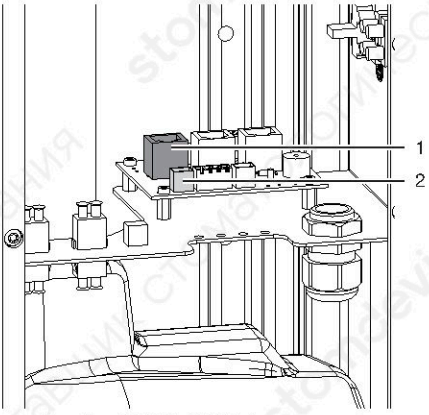

1 Slot X4: *DOOR SW*: RJ45 connection
2 Slot X6: *DOOR SW*: 2-pole connection, door contact

› Route the cable of the door contact switch through the cable bushing to the front into the column.
› When using slot X4 (RJ45), connect the signal from the door contact switch to Pin1 and Pin4.

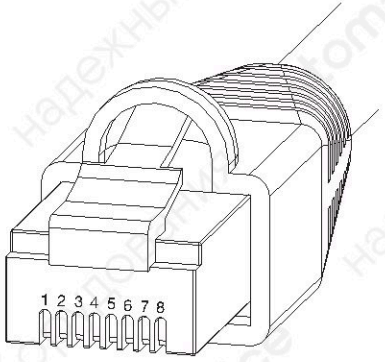


Fig. 4: Front view of RJ45 connector

› Connect the cable to the PCB *A07*.
Slot X4 or X6.
› When using the slot X6 (2-pole connection), connect the cables to the terminal contact.

Connecting the equipotential bonding


If equipotential bonding is required in order to comply with local regulations and requirements

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

for connections, this connection can be made via the connection on the rear of the unit.

› Connect the equipotential bonding cable (not included in the scope of delivery) to the connection on the unit.
The connection complies with DIN 42801.
The connection for the equipotential bonding is marked with the symbol ⏚.

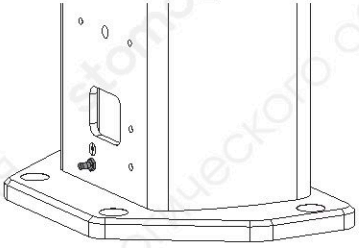

Connecting the device to a computer


Fiber optic cables are sensitive to dirt and dust. For this reason, do not remove the protective caps from the cable ends and plug sockets until just before you connect the cable. If the end of the cable gets dirty during connection then it will need to be cleaned. We recommend using a specialty cleaner for fiber optic cables (LC plug connections). Refer to the manufacturer's information when doing this.

Fiber optic cables are also sensitive to kinking. For this reason, do not to bend the cable at a sharp angle, but route it around corners with a radius of ≥ 80 mm.


› Route the enclosed fiber optic cable or a longer fiber optic cable from the accessories (see "3.2 Optional items") through the cable bushing to the front into the column.

› Remove the protective cap from the connector of the fiber optic cable and from the plug socket on the PCB and plug the fiber optic cable into the PCB.
Slot: X01 Optic Pano

When you plug it in, make sure to use the proper end of the fiber optic cable. Note the writing and position in the figure!

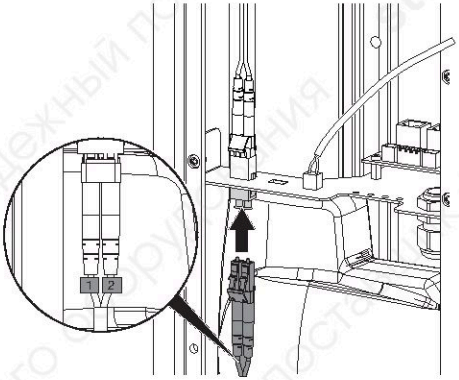

› For connection to the frame grabber card, the plug needs to divided into two separate plug connections.
For this purpose, bends the tab of the plug upwards and take the individual plug connector out. Repeat this with the other plug connector on the same side.

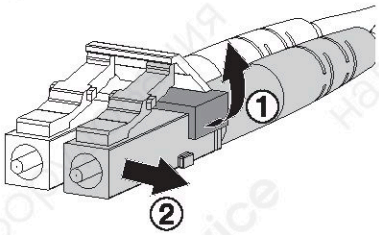


› Remove the protective cap on the plug connector labeled *1* and on the *OPTIC1* port of the frame grabber card.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

› Insert the plug connector *1* into the outer *OPTIC1* port.

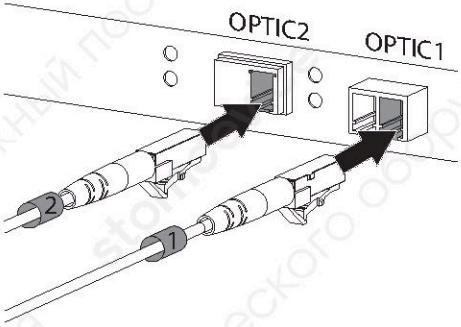

› Remove the protective cap on the plug connector labeled *2* and on the *OPTIC2* port of the frame grabber card.
Keep the protective cap of the socket safe.
› Insert the plug connector *2* into the *OPTIC2* port.
› Insert the protective cap of the *OPTIC2* port into the free port (inner) at *OPTIC1*.

Establishing the electrical connections

DANGER

Electric shock due to incorrectly connected device

› Never install a mains plug instead of the fixed connection.

Requirements:
– The electricity supply should supply 220 V. It must be safe-guarded with a fuse (time-lag) or a 15 A safety switch.
– Internal resistance of the mains supply < 0.5 Ω

Electrical safety when making connections

› Make sure that none of the electrical cables leading to the unit are under any mechanical tension.
› Before start-up, check the mains voltage against the voltage indicated on the type plate (see also "4 Technical data").
› Make sure that the electrical connections to the mains power supply are established in accordance with current valid national and local regulations and standards governing the installation of low voltage units in medical facilities.
› Note the current consumption of the devices that are to be connected.


Combining devices safely

Take care when connecting units together or to parts of other systems as there is always an element of risk (e.g. due to leakage currents).

› Only connect units when there can be no question of danger to operator or to patient.
› Only connect units when it is safe to do so and when there is no risk of damage or harm to the surroundings.
› If it is not completely clear from the data sheet of the unit that such connections can be safely made or if you are in any doubt, always get a suitably qualified person (e.g. the relevant manufacturer) to verify that the setup is safe.
› When connecting the unit to other devices, e. g. a PC system, comply with the requirements set out in section 16 of IEC 60601-1 (EN 60601-1).
› When setting up the PC system in the vicinity of the patient:
Only connect components (e.g. computer, monitor, printer) that comply with the standard IEC 60601-1 (EN 60601-1).
› When setting up the PC system outside of the vicinity of the patient:
Connect components (e.g. computer, monitor, printer) that comply at least with the IEC 60950-1 (EN 60950-1) standard.

Layout as 1/N/PE AC 200–240 V (EU)


› Connect the wires of the mains connection cable to the mains.

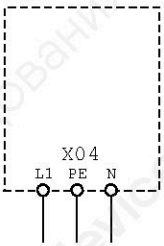

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ


Layout as 2/PE AC 200–240 V (US)

› Connect the wires of the mains connection cable to the mains.

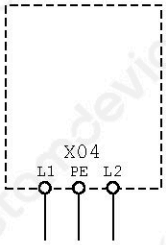

Securing the cables

› Secure the cables of the PCB *A07* using cable ties and the four holes in the sheet metal part.

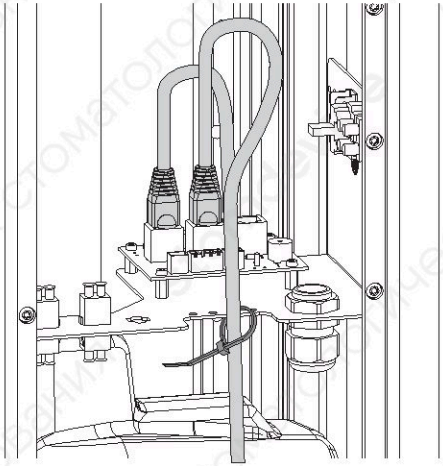


7.6 Limiting the height adjustment


The height of the unit can be variably adjusted to match the height of the patient. The maximum height can be limited.
To ensure that the unit can be opened for servicing, we recommend keeping a minimum distance of 30 cm between the fully extended unit and the ceiling.

› Move the unit to the lower height level of the unit.

Check for correct alignment when fastening the adjustment cam. The beveled side must face downwards.

› Remove the adjustment cam and screw it back on in the required position of the unit.

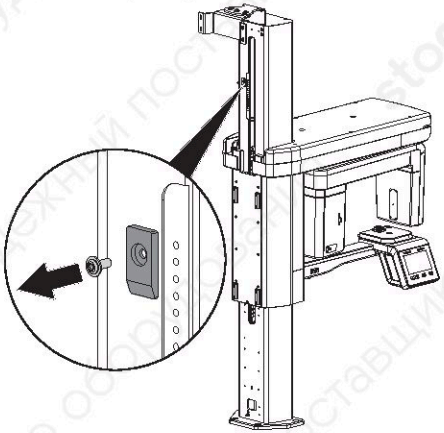

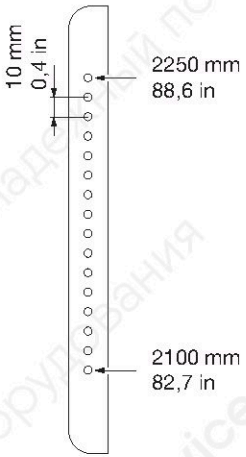

› Move the unit to the maximum height level of the unit.
Check that there is enough space between the upper part of the housing and the ceiling.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

8 Commissioning and first start-up

NOTICE

Short circuit due to the build-up of condensation

› Do not switch on the unit until it has warmed up to room temperature and is dry.

The required tests (e.g. acceptance test) must be done in accordance with local rules and regulations.

› Find out which tests are required.
› Carry out testing in accordance with local rules and regulations.
› Carry out and document the instruction and handover for the unit.

A sample handover report is included in the attachment.

8.1 Switch the device on


CAUTION

Danger of injury by moving rotating unit arm


After the unit is switched on and the parameters are confirmed on the touch screen, the C-shaped angle connector piece is positioned. Persons can be injured during this.

› Nobody may be present in the area of the rotating unit arm while the unit is being switched on.

› Use the main power switch to switch the unit on.

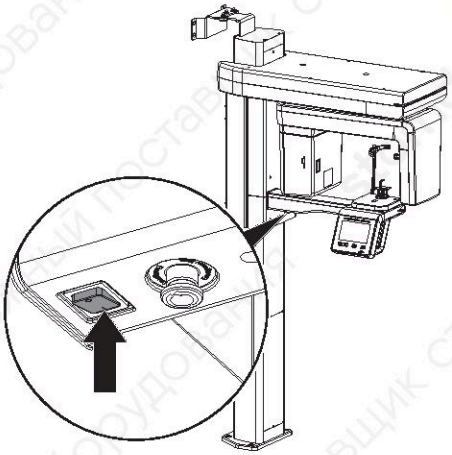

The main power switch lights up green after it is switched on. The status LED lights up blue.

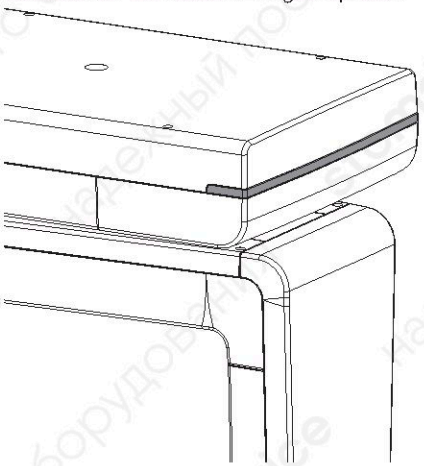

Manual functional test

The manual functional test needs to be performed in order to ensure that no damage occurred during transport and installation/assembly.

Driving the unit up and down may trigger the overheating protection of the lift motor. Allow the unit to cool down in between.

› Move the unit to the maximum height level of the unit.
Are there any suspicious noises?

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

› Move the unit to the minimum height level of the unit.
Are there any suspicious noises?
Is there a sufficient distance between the top cover of the housing and the ceiling?

8.2 Electrical safety checks

› Carry out the electrical safety check according to national law (e. g. in accordance with IEC 62353).
› Document the results.

8.3 Checking the installation

The settings are described using the VisionX imaging software for an example.
VisionX can be downloaded from www.airtechniques.com.
For further information regarding the use of the imaging software, refer to the relevant manual.

Configuring the unit

The configuration is done in the settings of the imaging software.
› Start the imaging software.
› Click ⚙.
› Click *Devices*.
› Check to make sure that the checkmark is placed in the column *Connected*.
This shows that the unit is connected to the imaging software and that it has been detected.

8.4 Calibrating the unit

The unit must be calibrated in order to obtain homogeneous, defect-free and reproducible X-ray images.
Here, the radiation field on the sensor is adjusted by aligning the child and adult collimators.
✓ VisionX 2.3 or higher is installed
✓ VistaVox plug-in is installed
✓ USB stick with device-specific calibration data is plugged in on the reconstruction computer

The path information is for the default installation.

The USB stick contains device-specific calibration data. We recommend storing the stick with the documents of the device (e. g. X-ray facility book, operating instructions).

› Plug the USB stick with device-specific calibration data into an unoccupied USB port.
› Start the service tool on the reconstruction computer.
For this purpose, start the file, *ServiceTool initial installation* under *C:\ProgramData\AIR TECHNIQUES\VisionX\WorkstationService \VistaVoxPlugin\VistaVoxServiceTool*.
The service tool starts up with the workflow required for the configuration. All other workflows are not available.
If the service tool is to be started up with all workflows, start the file, *ServiceTool.exe* in the same directory.
› The service tool guides you through the setup and calibration of the unit.

8.5 Carrying out a functional test

In countries, in which the acceptance and consistency checks are a legal requirement, the functional test can be omitted.
The functional test must be performed to ensure correct operation of the unit after installation and during operation. We recommend performing the functional test right after the installation and then every 4 weeks. The functional test can also be performed if there are problems with the image quality as a way to narrow down the root cause. Tests such as operational check, electrical safety tests are regulated by the local and federal code.
– Find out which tests are to be made and the required intervals for your specific installation.
– Conduct tests in accordance with code.

Required test equipment and software

Required test equipment:
– Test body set for pano
– Test body set for CBCT
Software required:
– Imaging software

Creating patient

A dummy patient needs to be created so that the images can be acquired for the functional test.
› Start the imaging software.
› Create a patient named *Functional test*.
› Log in the created patient.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

Performing a pano functional test

Positioning the test body

› Remove the mounting for bite block, chin supports etc.
› Insert the holder for the pano test body.
› Insert the pano test body in the holder.

Taking the X-ray image

› Take a test image.
Parameters: Pano Standard, SD, patient shape "Normal", jaw arch "Normal", 73 kV, 12 mA
› Evaluate the test image.
At least 2.5 LP/mm and two contrast bores must be visible.
The image must be uniform and free of artifacts.

Since this image is a processed X-ray image, it may appear noisy. This is normal and has no impact on quality.

Performing a CBCT functional test

Positioning the test body

› Remove the mounting for bite block, chin supports etc.
› Insert the holder for the CBCT test body.
› Level the holder with the aid of the integrated spirit level and adjusting screws.
› Place the complete test body (which is made up of several parts) on the holder for the test body.

Taking the X-ray image

› Take a test image.
Parameters: CBCT, image volume "Normal", HD, patient shape "Normal", voxel size 0.2 mm, 94 kV, 8 mA
› Evaluate the test image.
The image must be uniform and free of artifacts. The visible object must be square on the inside and outside.

8.6 Performing an acceptance test

In order to ensure correct operation of the unit after installation, in Germany an acceptance test in accordance with DIN 6868-151 needs to be performed for panoramic X-ray devices and in accordance with DIN 6868-161 for CBCT X-ray units.
Please follow the corresponding national legislation in other countries.
We recommend the use of VisionX Inspect.

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

EN-US

Appendix

9 Handover record

This document confirms that a qualified handover of the medical device has taken place and that appropriate instructions have been provided for it. This must be carried out by a qualified adviser for the medical device, who will instruct you in the proper handling and operation of the medical device.

Product name	Order number (REF)	Serial number (SN)

- ☐ Visual inspection of the packaging for any damage
- ☐ Unpacking the medical device and checking for damage
- ☐ Confirmation of the completeness of the delivery
- ☐ Instruction in the proper handling and operation of the medical device based on the operating instructions

Notes:

Name of person receiving instruction:	Signature:

Name and address of the qualified adviser for the medical device:

Date of handover:	Signature of the qualified adviser for the medical device:

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ

stomdevice

For over 50 years, Air Techniques has been a leading innovator and manufacturer of dental products. Our priority is ensuring complete satisfaction by manufacturing reliable products and providing excellent customer and technical support. Whether the need is digital imaging, utility room equipment or merchandise, Air Techniques can provide the solution via our network of authorized professional dealers.

Air Techniques' family of quality products for the dental professional include:

- **Digital Imaging**
  - Digital Radiography
  - Intraoral Cameras
  - Caries Detection Aid
  - X-ray Systems
  - Film Processors
- **Utility Room**
  - Dry Vacuums
  - Wet Vacuums
  - Air Compressors
  - Amalgam Separator
  - Utility Accessories
  - Utility Packages
- **Merchandise**
  - Imaging Accessories
  - Chemistry
  - Processor Cleaners
  - Surface Disinfectant
  - Instrument Cleaner
  - Hand Sanitizer + Hand Lotion
  - Evacuation System Cleaner
  - Water Line Cleaner

Manufactured for / Distributed by:

Air Techniques, Inc. | 1295 Walt Whitman Road | Melville, New York 11747-3062, USA
Phone: 800-247-8324 | Fax: 888-247-8481

DÜRR DENTAL SE | Höpfigheimer Str. 17 | 74321 Bietigheim-Bissingen | Germany

www.airtechniques.com

Platinum Green Business Certified

CE 0297

AIR TECHNIQUES equipped for life®

https://stomdevice.ru - стоматологическое и зуботехническое оборудование с доставкой по России и СНГ